


TYGER BLADE

TG-BL3F7318

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

| TORQUE VALUES | | |
|---------------|---------------------------|----------------------------|
| Fastener Size | Class 8.8 Torque (ft-lbs) | Class 10.9 Torque (ft-lbs) |
| 6mm | 6-7 | 6-7 |
| 8mm | 15-16 | 22-23 |
| 10mm | 31-32 | 44-45 |
| 12mm | 54-55 | 78-79 |
| 14mm | 87-88 | 125-126 |

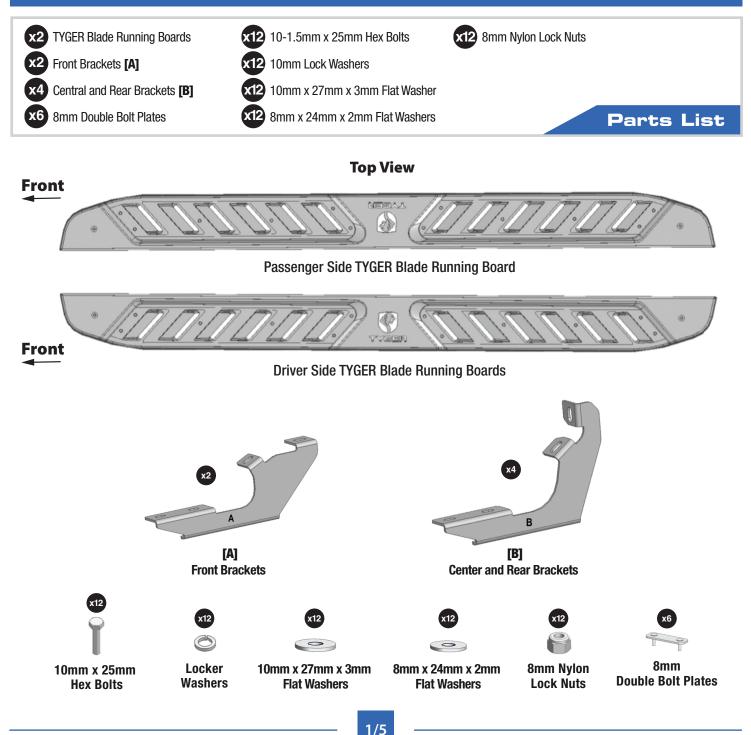




Attention: Both Driver and Passenger Side have the same brackets and running boards

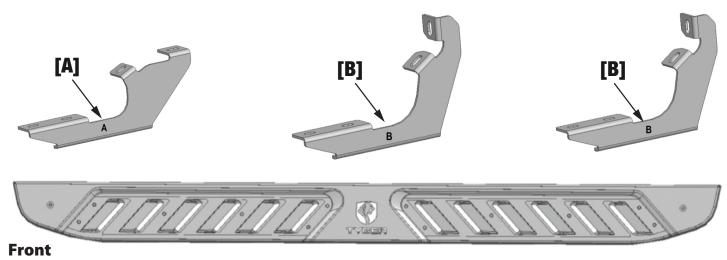


Driver side is shown here

Bottom View Assembled Running Board

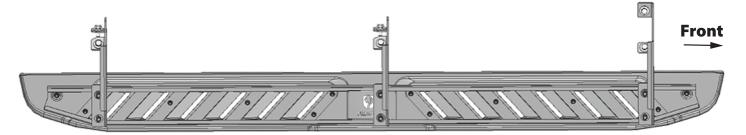


TOOLS REQUIRED

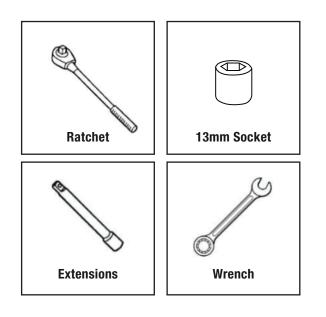



STEP I


Follow (Fig 1 - 11) to attach the brackets to the Driver Side.

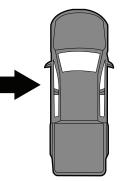





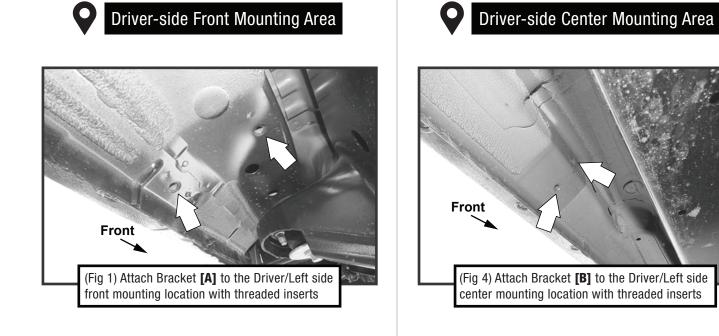

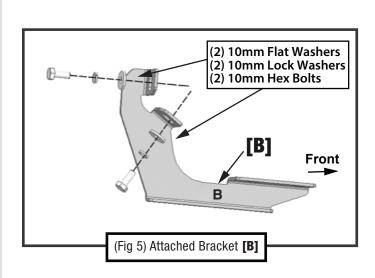


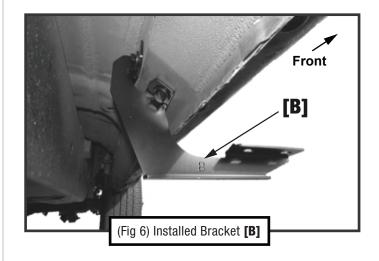

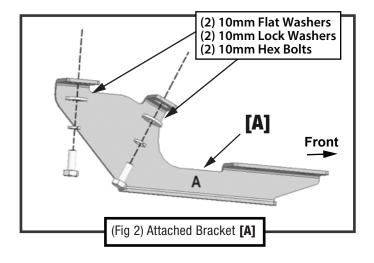

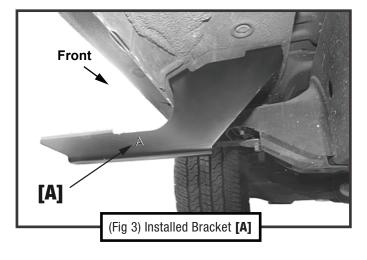




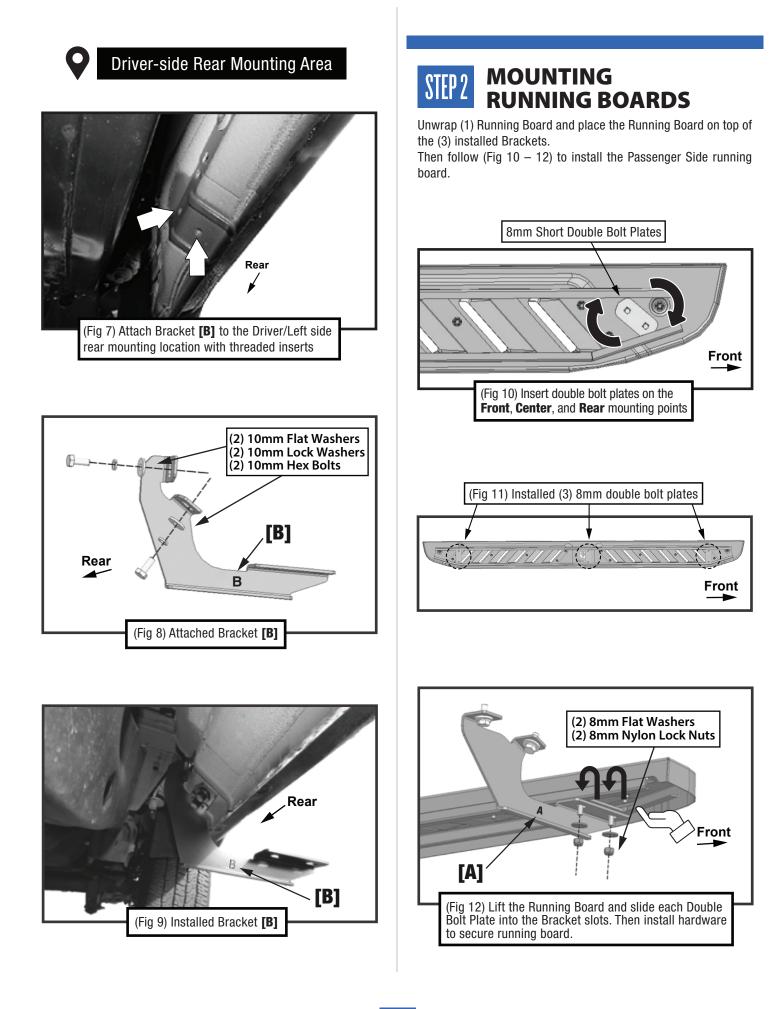

TYGER



 Repeat **STEPS 1-2** for Passenger side installation.





Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

