

TYGER BLADE

TG-BL3T7088

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES		
ener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
l0mm	31-32	44-45
2mm	54-55	78-79
l4mm	87-88	125-126
	ener Size 6mm 8mm 0mm 2mm	ener Size Class 8.8 Torque (ft-lbs) 6mm 6-7 8mm 15-16 0mm 31-32 2mm 54-55





x6 8mm Double Bolt Plates


x12 8mm Lock Washers

x24 8mm x 24mm x 2mm Flat Washers

x12 8mm Nylon Lock Nuts


Parts List

Top View

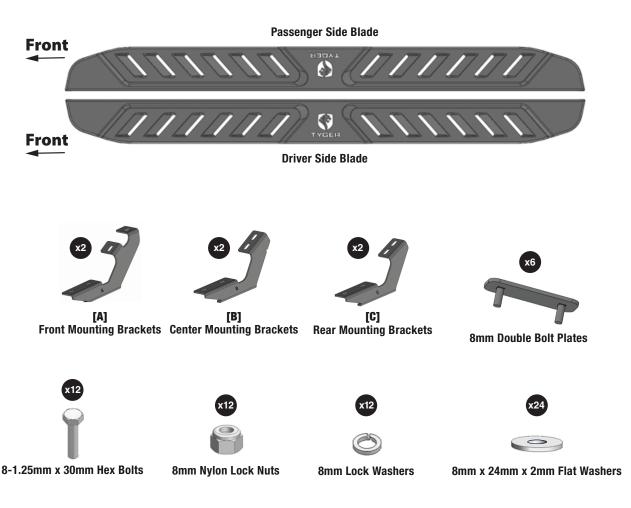




Reference the letters printed on the brackets to determine mounting locations

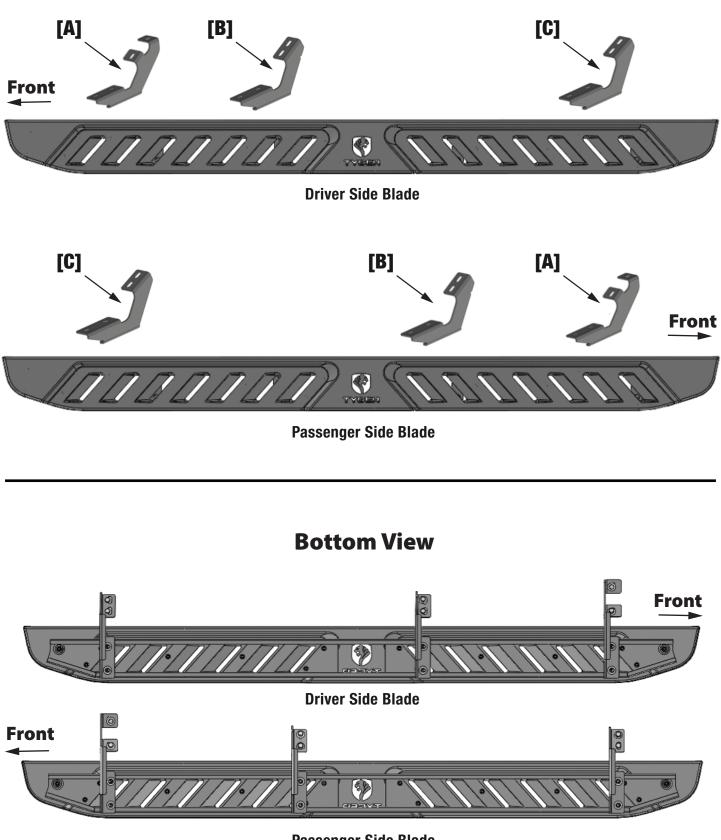


Passenger Side Blade


😵 TYGER[®]

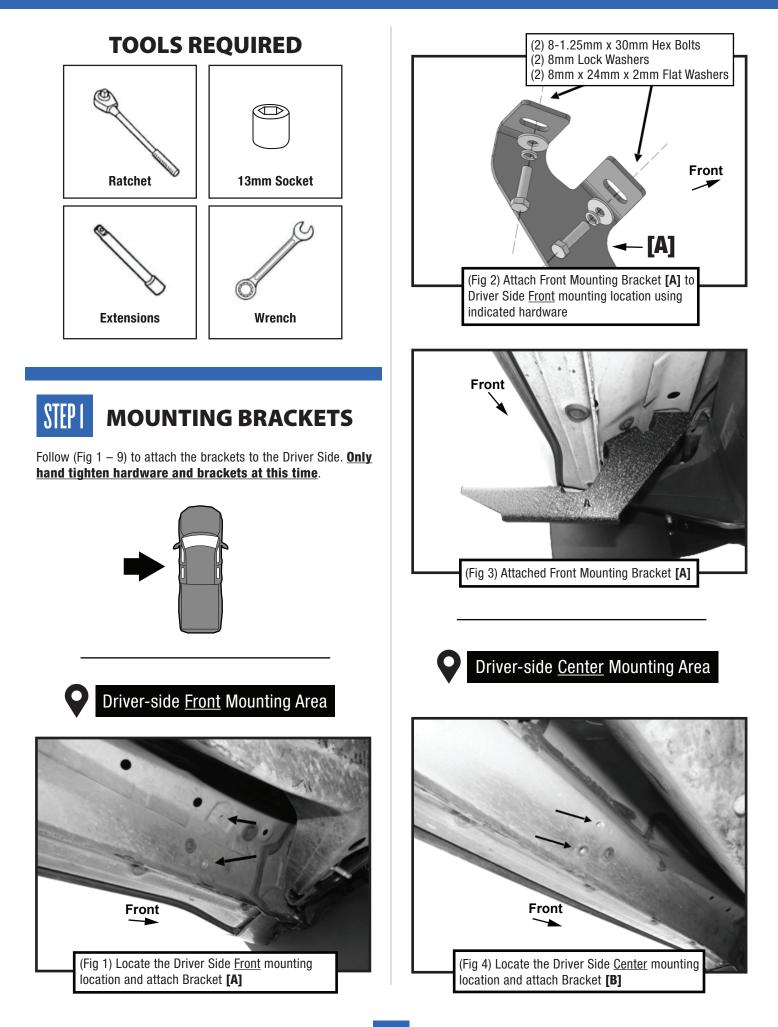



TYGER BLADE




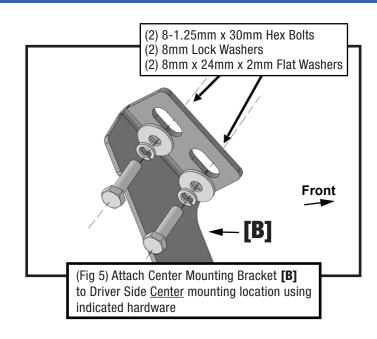


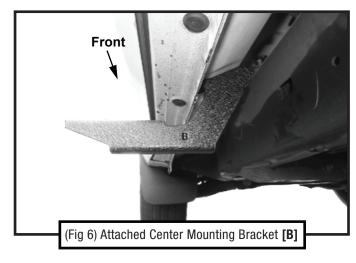

 

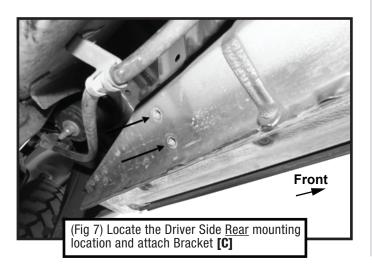


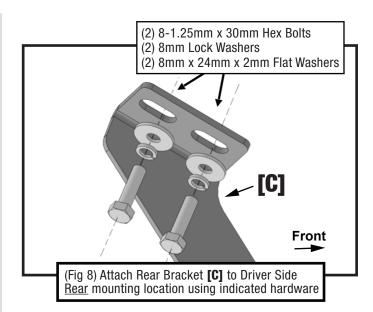

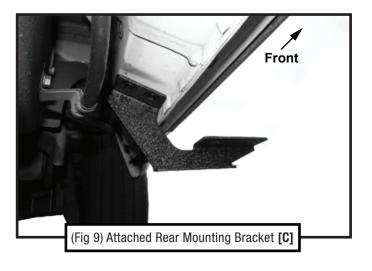




Follow (Fig 10 - 11) to install the running board.

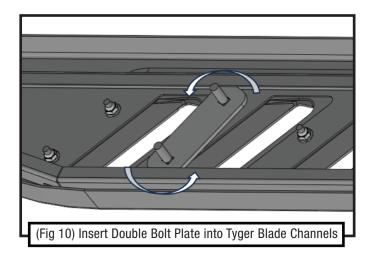




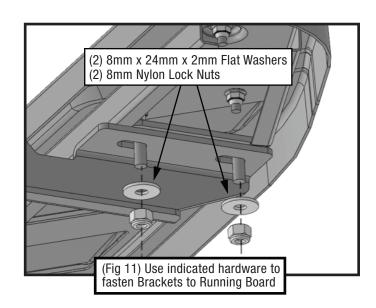



 Repeat STEPS 1-2 for passenger side installation. <u>Make sure</u> that all hardware is secure and tight after preferred adjustments.





Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.