



TYGER®

Pauldrons

TG-TG7T87778

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1 Driver Side Tail Light Guard **D**
- x1 Passenger Side Tail Light Guard **P**
- x1 Driver Side Bracket **[A]**
- x1 Passenger Side Bracket **[D]**
- x1 Driver Side Upper Bracket **[B]**
- x1 Passenger Side Upper Bracket **[E]**


- x1 Driver Side Lower Bracket **[C]**
- x1 Passenger Side Lower Bracket **[F]**
- x8 6-1.0mm x 10mm Flat Head Bolts
- x1 Wrench 4mm
- x2 Tap Screws
- x2 Spacers

Parts List


Perspective View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger Tail Light Guard


D Driver Side Tail Light Guard

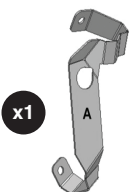

[A]
Driver Side Bracket

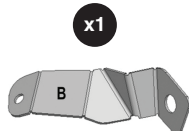


[B]
Driver Side Upper Bracket

 


[C]
Driver Side Lower Bracket


P Passenger Side Tail Light Guard

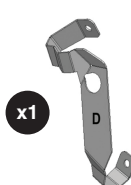

[D]
Passenger Side Bracket

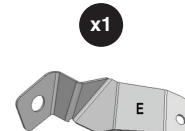

[E]
Passenger Side Upper Bracket

 

[F]
Passenger Side Lower Bracket



Tap Screw





Flat Head Bolt




Spacer


Reference the letters printed on the brackets to determine mounting locations

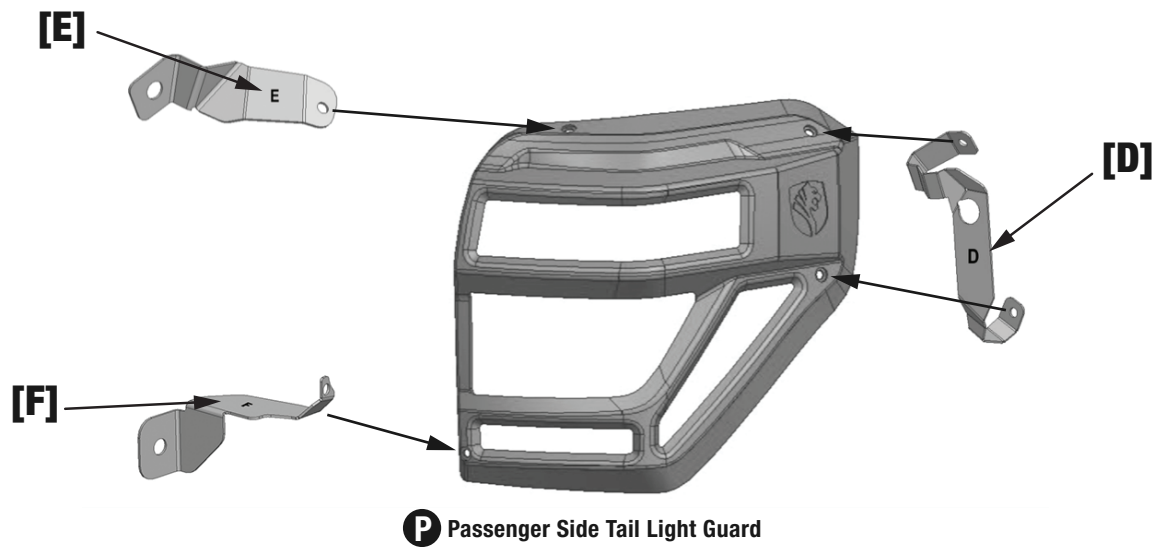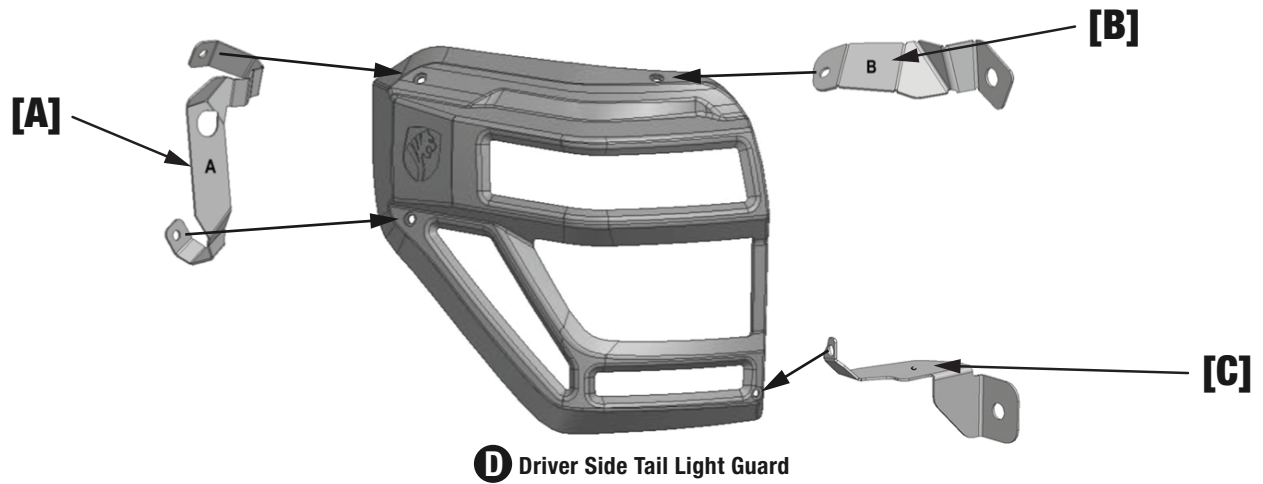

Back View

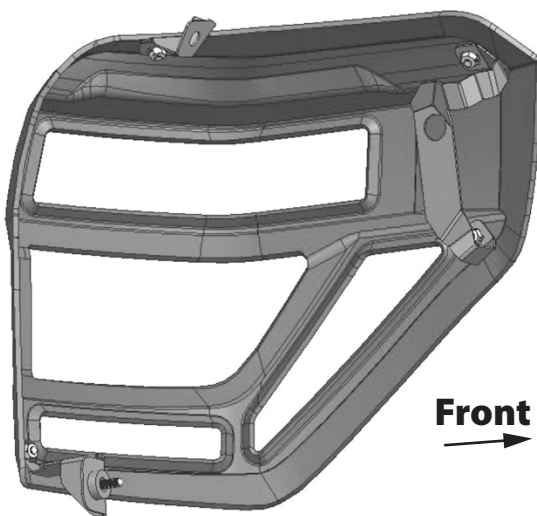


D Driver Side Tail Light Guard

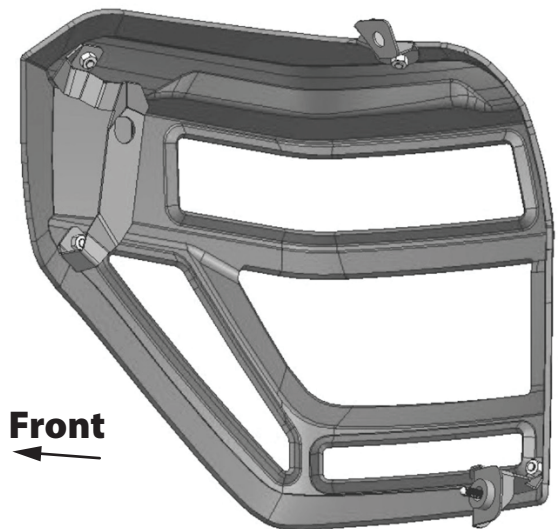

P Passenger Side Tail Light Guard


TOOLS REQUIRED

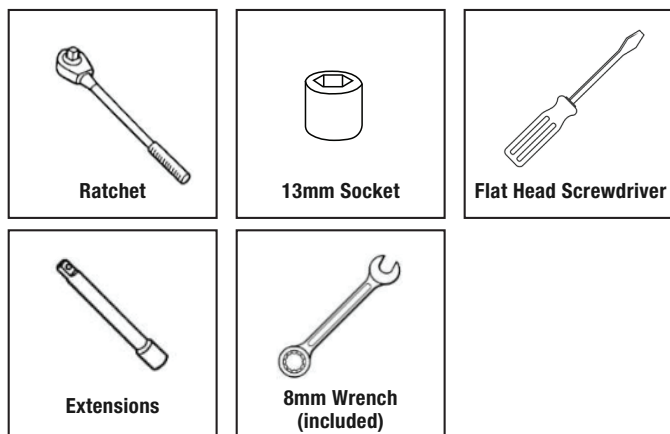


(Fig 2) Unplug tail light

STEP 1 MOUNTING BRACKETS


Follow (Fig 1-14) to attach brackets to install Tail Light Guard to Driver Side.

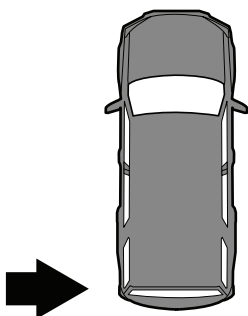


Driver-side Mounting Area

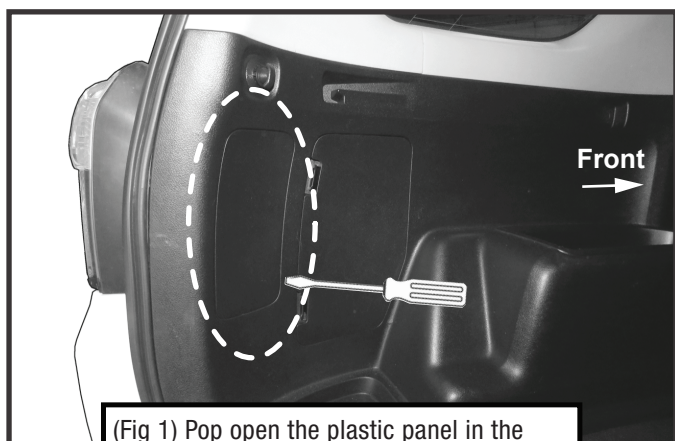


(Fig 1) Pop open the plastic panel in the interior of trunk with a flat head screwdriver

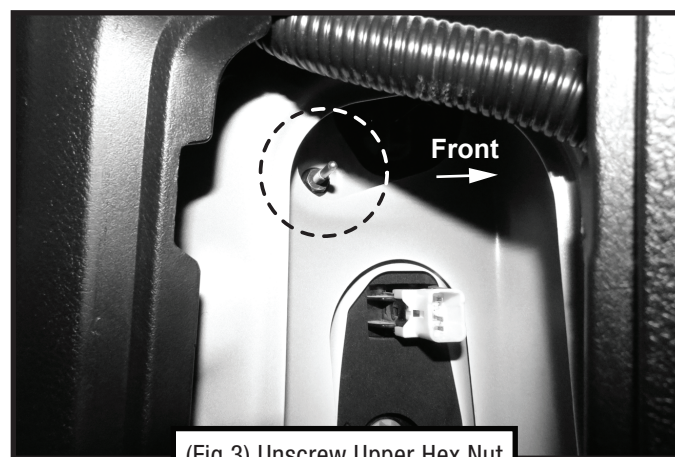


(Fig 3) Unscrew Upper Hex Nut

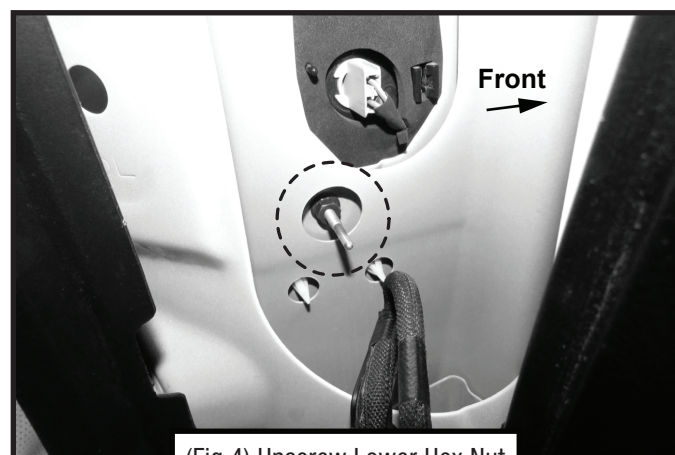


(Fig 4) Unscrew Lower Hex Nut

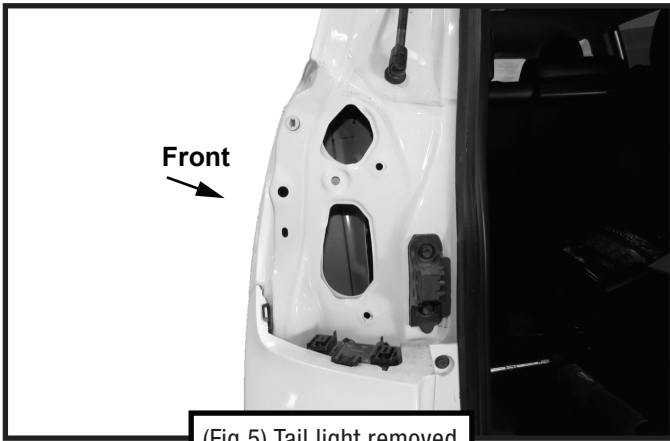


(Fig 5) Tail light removed

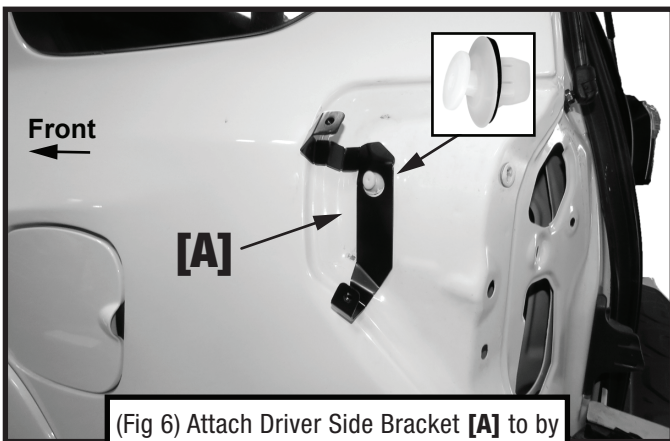


(Fig 6) Attach Driver Side Bracket [A] to by hanging it to the factory Plastic Clip

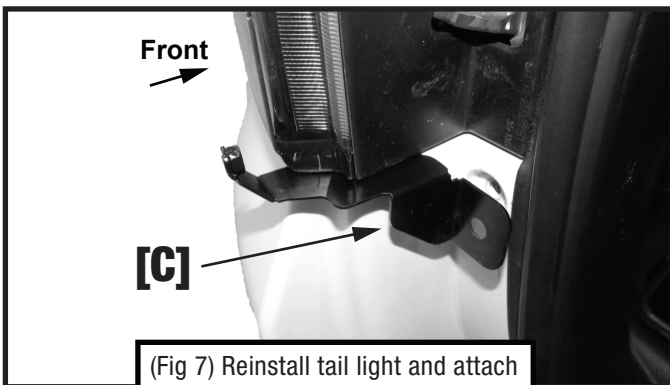

(Fig 7) Reinstall tail light and attach Driver Side Lower Bracket [C]

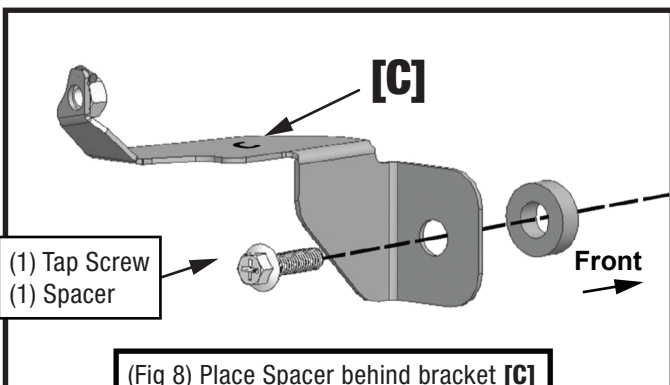

(Fig 8) Place Spacer behind bracket [C] and install with Tap Screw

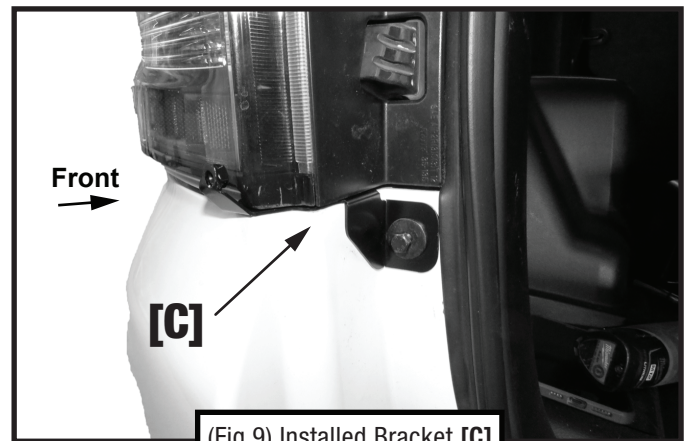

(Fig 9) Installed Bracket [C]




(Fig 10) Pry to remove lift strut retainer with flathead screwdriver and then detach the strut




(Fig 11) unscrew joint with a 12mm socket/wrench



(Fig 12) Joint Removed

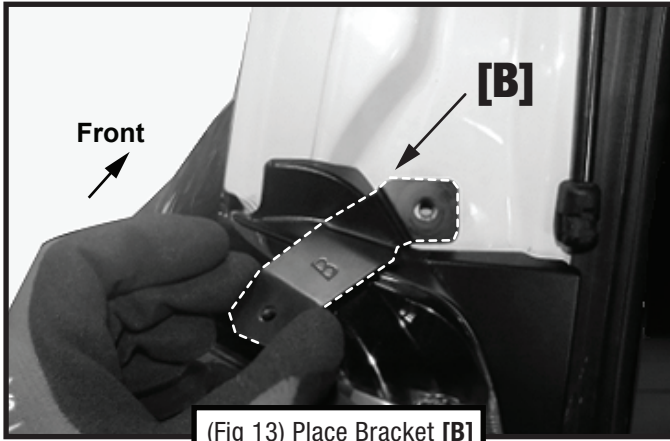

(Fig 13) Place Bracket [B]

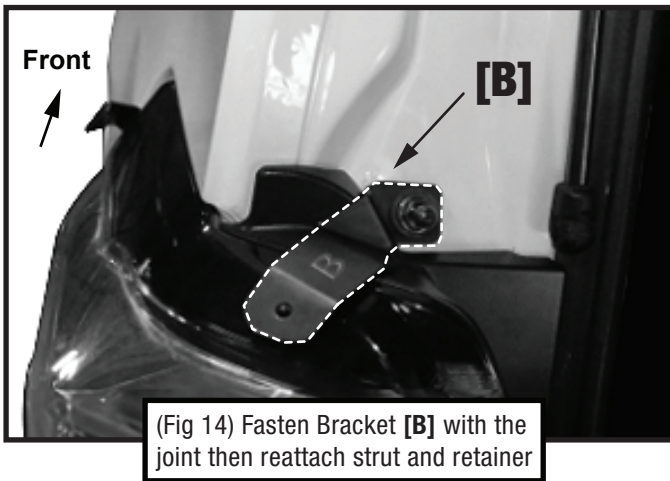

(Fig 14) Fasten Bracket [B] with the joint then reattach strut and retainer

Note: Remember to reattach the tail light to the interior housing with the hex nuts and reattach the plug then reapply the cover panel.


STEP 3 PASSENGER SIDE

Repeat **STEPS 1-2** for passenger side installation.

Use Bracket [D] instead of [A];


Use Bracket [E] instead of [B];

Use Bracket [F] instead of [C].

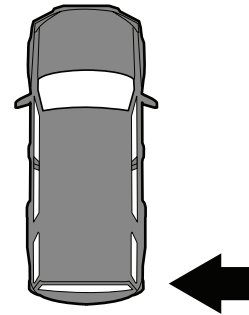

STEP 2 MOUNTING TAIL LIGHT GUARD

Follow (Figs 15) to install the driver-side tail light guard.

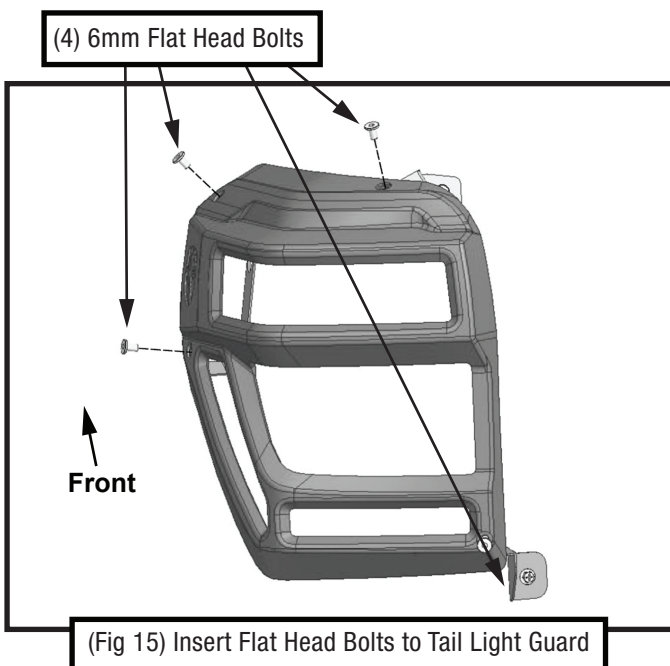

(Fig 15) Insert Flat Head Bolts to Tail Light Guard

STEP 4

Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

