

# TYGER ACCESS

TG-AS2C24001

d6

Scan to Download the Latest Digital Version



Parts List

#### **BEFORE INSTALLATION**

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

#### **TORQUE VALUES**

<16 8mm Lock Washers

8mm x 24mm 0D x 2mm Flat Washers

8-1.25mm x 25mm Hex Combo Bolts

8-1.25mm x 30mm Hex Bolts

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126




Driver/Left Tyger Access

Passenger/Right Tyger Access

Driver/Left Mounting Brackets [A]


Passenger/Right Mounting Brackets [B]

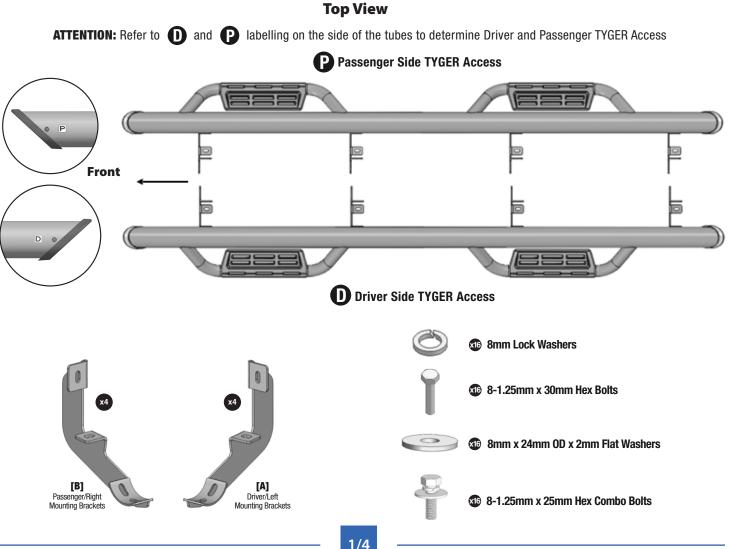



### **Reference the letters printed on the brackets to determine mounting locations**

**TYGER**®

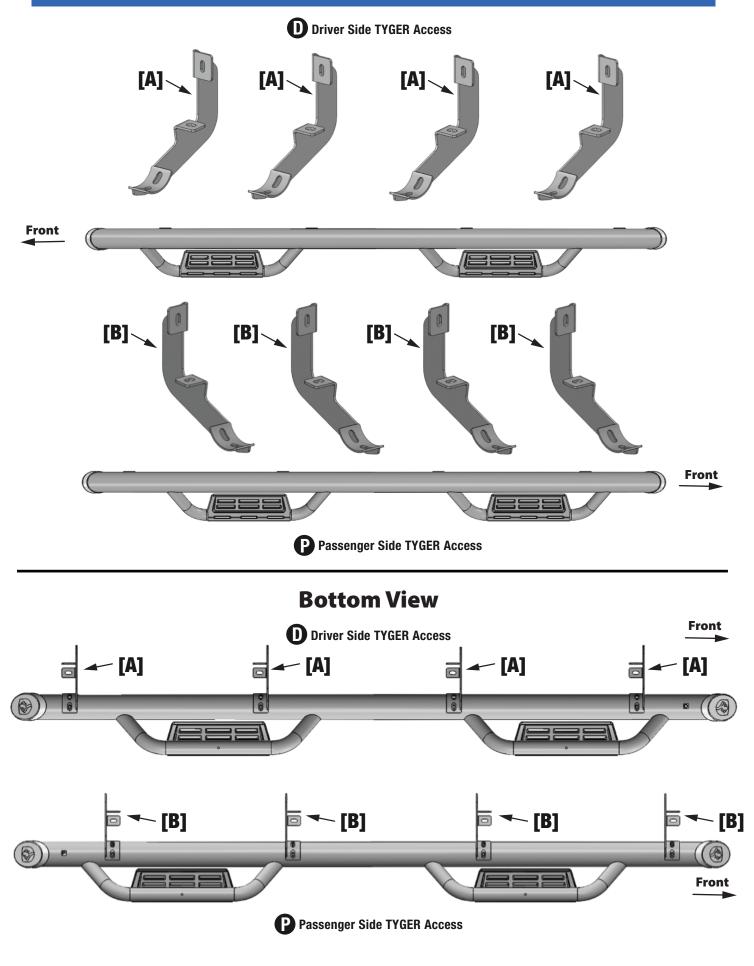


## **TYGER**<sup>°</sup>







## **MOUNTING BRACKETS**


Follow (Fig 1 - 7) to attach the brackets to the Passenger/Right Side. Ensure all hardware is hand tightened at this point.







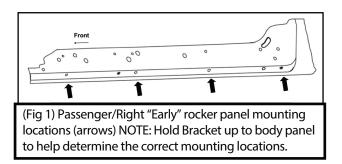

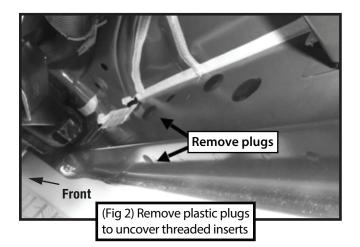


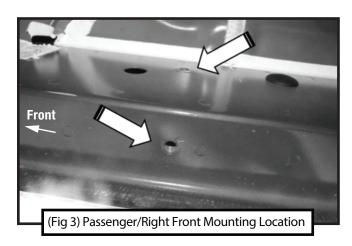


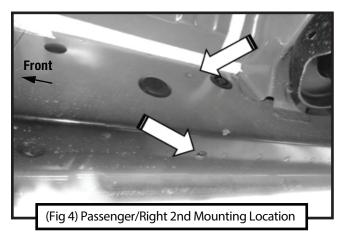

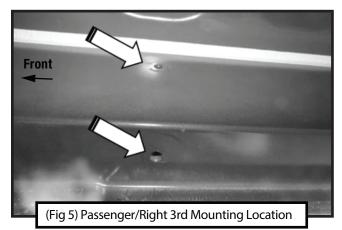




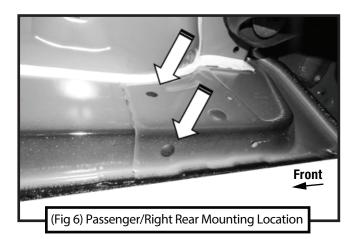

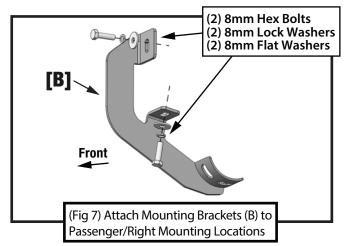


#### STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 8) to install the Tyger Access Drop Step on the Passenger/Right Mounting Brackets. Ensure all hardware is hand tightened at this point.

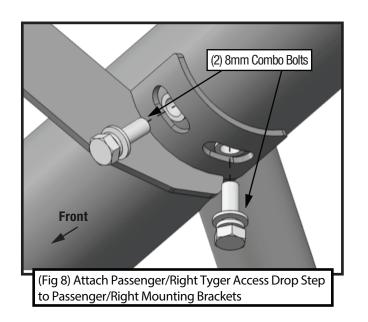

## STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation. Use Mounting Bracket **[A]** instead of **[B]**.



## STEP 4

Ensure Tyger Access Drop Step is level and straightened, then tighten all fasteners. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

