

TYGER ACCESS

TG-AS2C24002

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES


Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- x1 Driver/Left Tyger Access
- x1 Passenger/Right Tyger Access
- x3 Driver/Left Mounting Brackets [A]
- x3 Passenger/Right Mounting Brackets [B]
- x12 8mm Lock Washers


- 8mm Clip Nuts
- 8mm x 24mm OD x 2mm Flat Washers
- x12 8-1.25mm x 30mm Hex Bolts
- x12 8-1.25mm x 25mm Hex Combo Bolts

Parts List

Top View



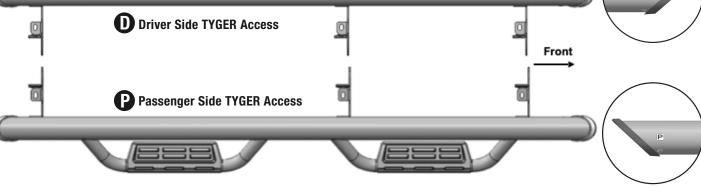

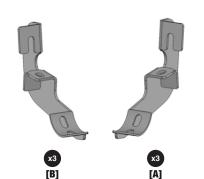



8mm Clip Nuts



8mm x 24mm OD x 2mm Flat Washers



8-1.25mm x 30mm Hex Bolts




8mm Lock Washers




8-1.25mm x 25mm Hex Combo Bolts



Reference the letters printed on the brackets to determine mounting locations

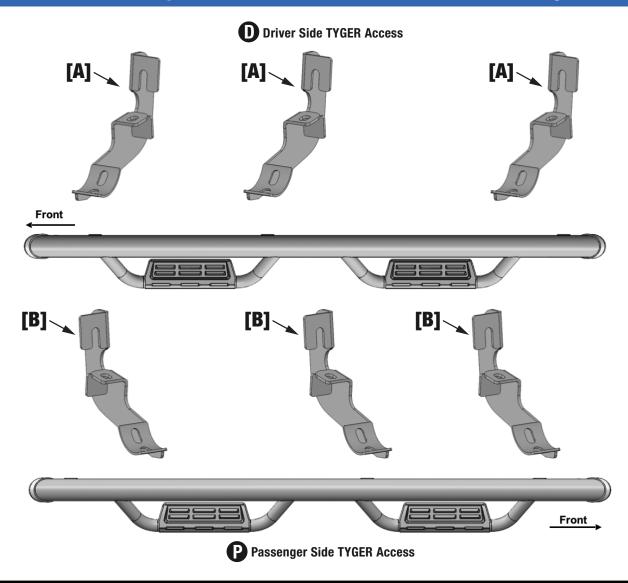


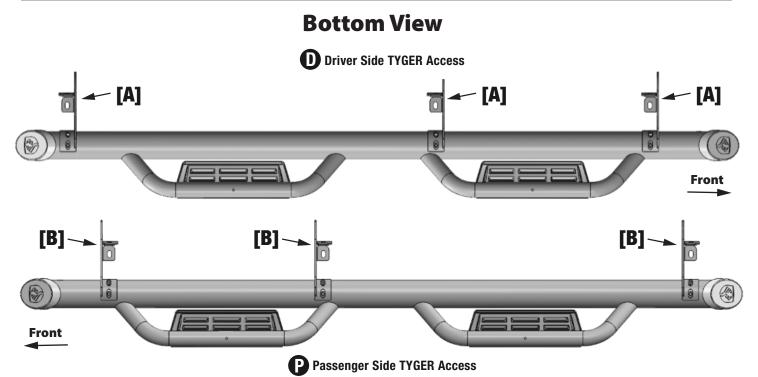






TOOLS REQUIRED



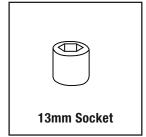

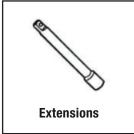

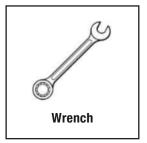


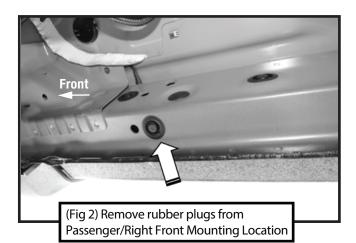


STEP I

MOUNTING BRACKETS


Follow (Fig 1-8) to attach the brackets to the Passenger/Right Side. Ensure all hardware is hand tightened at this point.

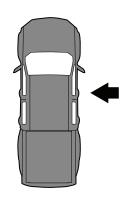


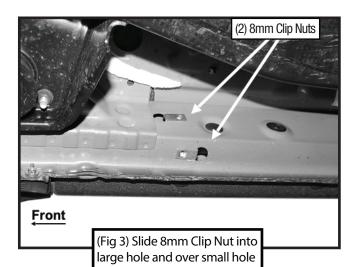



Passenger-side Front Mounting Area

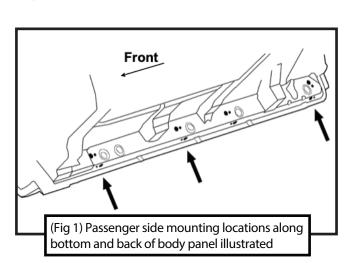


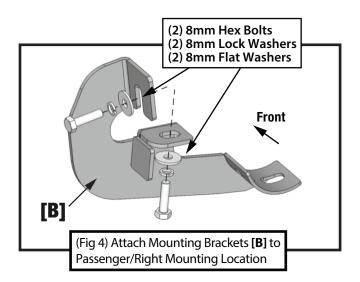




9


Passenger-side <u>Center</u> Mounting Area

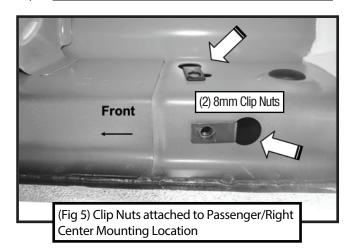


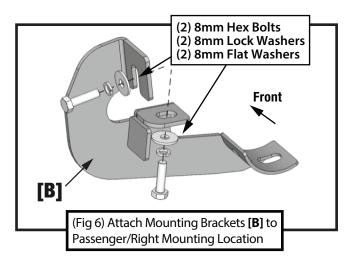

0


Passenger-side Rear Mounting Area

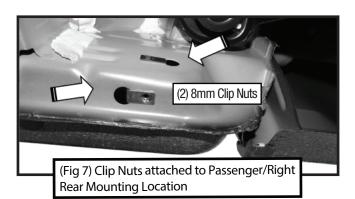

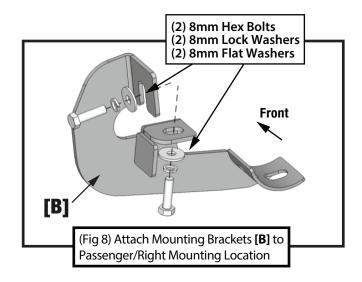

MOUNTING RUNNING BOARD

Follow (Fig 9) to install the Tyger Access Drop Step on the Passenger/Right Mounting Brackets. Ensure all hardware is hand tightened at this point.

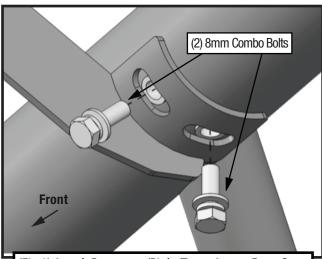


(Fig 9) Attach Passenger/Right Tyger Access Drop Step to Passenger/Right Mounting Brackets





DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation. Use Mounting Brackets **[A]** instead of **[B]**.





Ensure Tyger Access Drop Step is level and straightened, then tighten all fasteners. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.

