



TYGER®

TYGER LanderX

TG-LX3T83648

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES


| Fastener Size | Class 8.8 Torque (ft-lbs) | Class 10.9 Torque (ft-lbs) |
|---------------|---------------------------|----------------------------|
| 6mm | 6-7 | 6-7 |
| 8mm | 15-16 | 22-23 |
| 10mm | 31-32 | 44-45 |
| 12mm | 54-55 | 78-79 |
| 14mm | 87-88 | 125-126 |

- | | | | |
|---|--|--|--|
| x1 Driver/Left TYGER LanderX | x3 Driver Side Center and Rear Mounting Bracket [B] | x16 8-1.25mm x 25mm Combo Hex Bolts | x16 8mm x 24mm x 3mm Flat Washers |
| x1 Passenger/Right TYGER LanderX | x1 Passenger Side Front Mounting Bracket [C] | x16 8-1.25mm x 30mm Hex Bolts | x16 8mm Lock Washers |
| x1 Driver Side Front Mounting Bracket [A] | x3 Passenger Side Center and Rear Mounting Bracket [D] | | |

[Parts List](#)

Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger LanderX

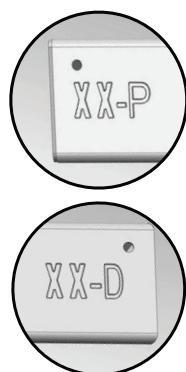


Front ←

P Passenger Side LanderX

Front ←


D Driver Side LanderX

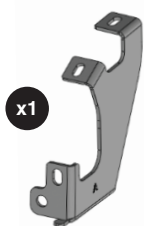

x1

[A]

Driver Side Front Mounting Bracket

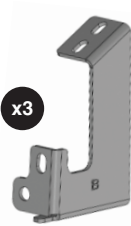

x3

[B]

Driver Side Center and Rear Mounting Bracket



x1

[C]

Passenger Side Front Mounting Bracket



x3

[D]

Passenger Side Center and Rear Mounting Bracket



x16

Hex Bolts



x16

Combo Hex Bolts



x16



Flat Washer





x16

Lock Washer



Reference the letters printed on the brackets to determine mounting locations

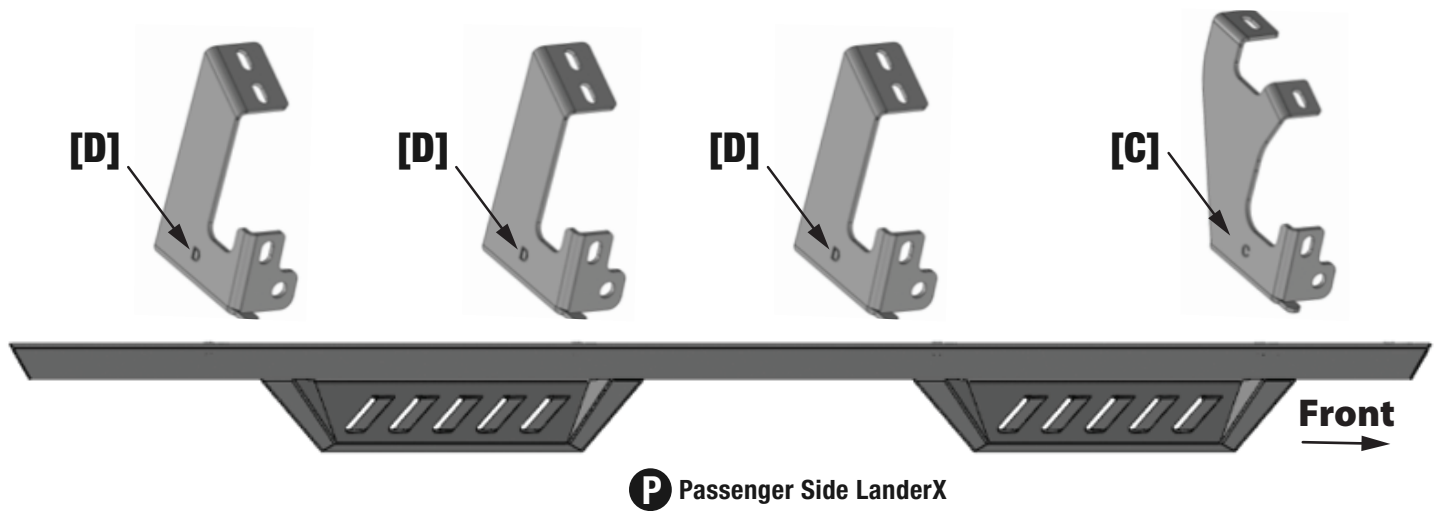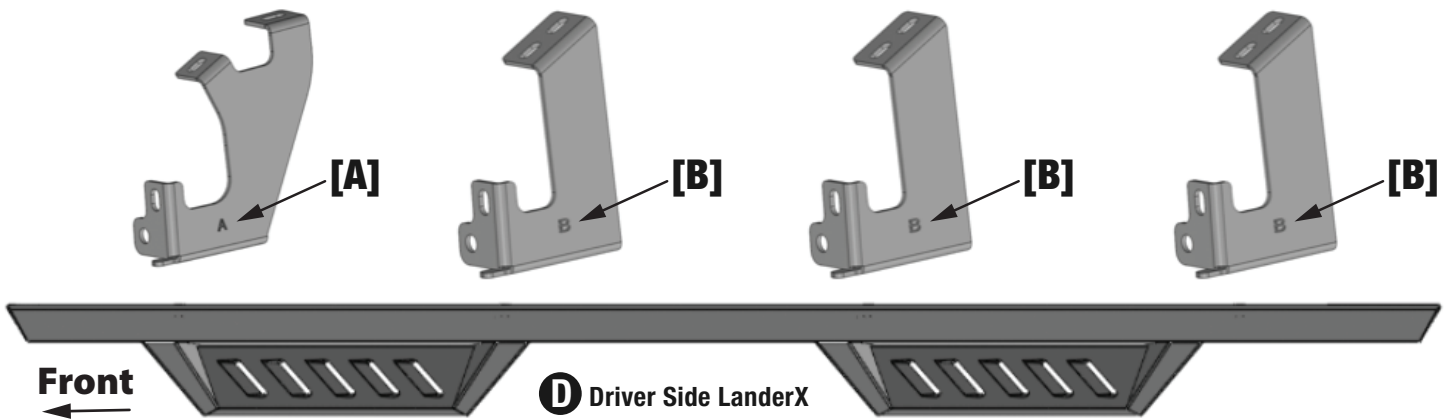


Bottom View

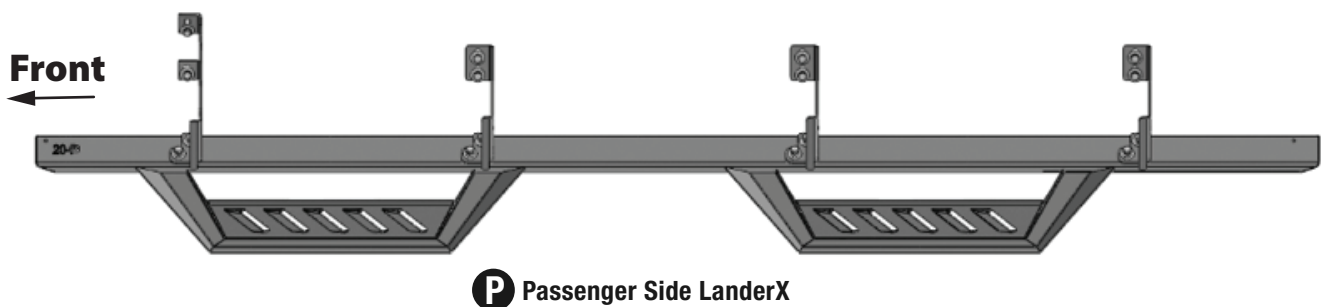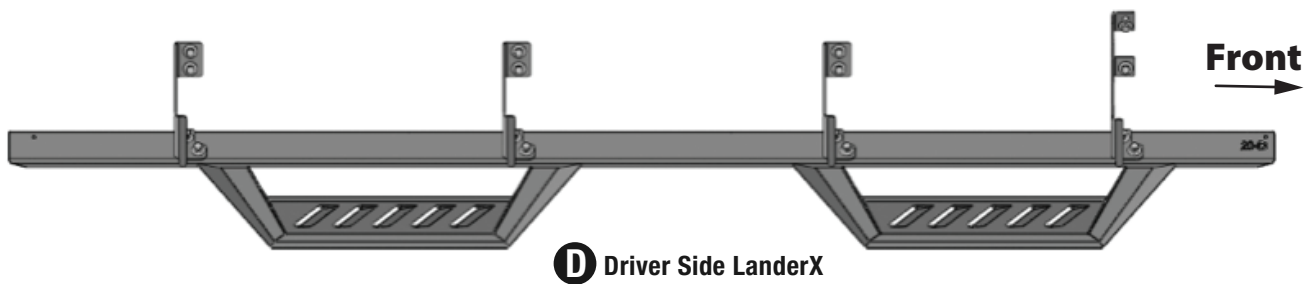


TOOLS REQUIRED

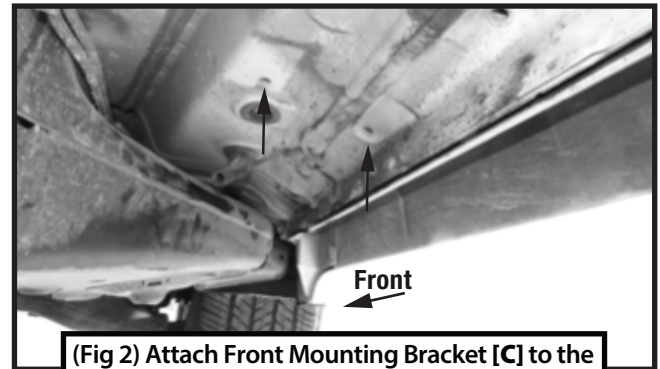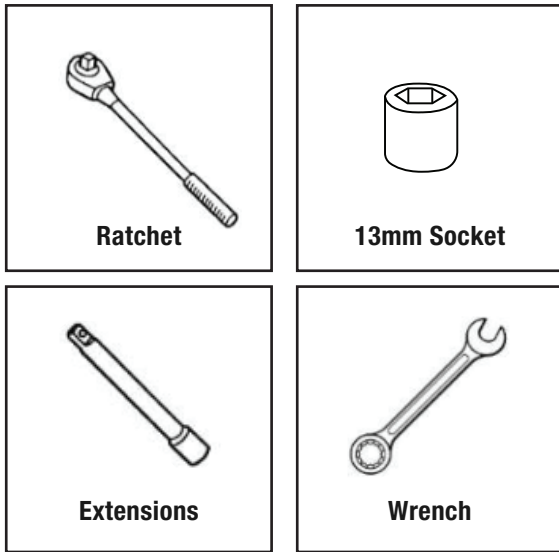

(Fig 2) Attach Front Mounting Bracket [C] to the Passenger/Right Side front mounting location

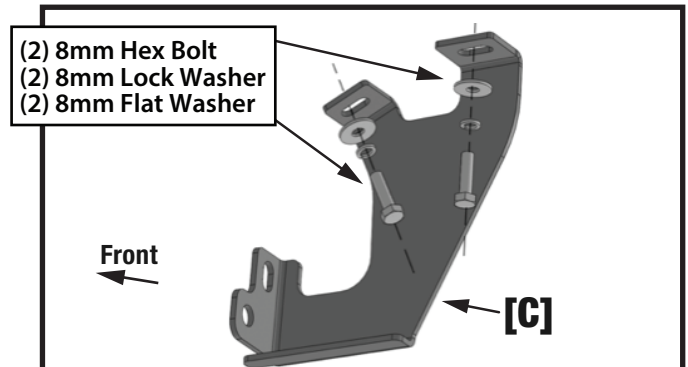


(Fig 3) Attach Front Mounting Bracket [C] to the Passenger/Right Side front mounting location

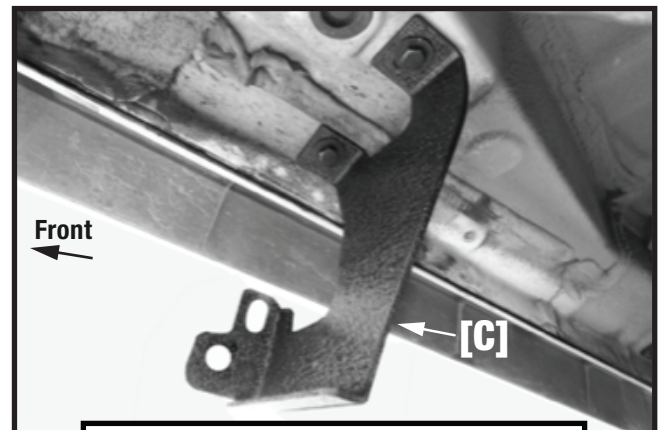

(Fig 4) Attached Front Mounting Bracket [C]


Passenger-side 2nd Mounting Area

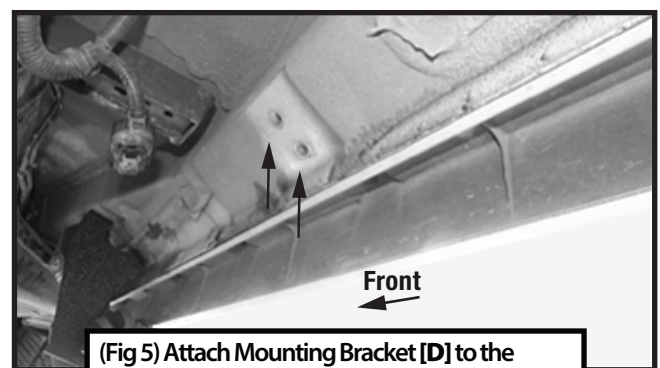


(Fig 5) Attach Mounting Bracket [D] to the Passenger/Right side second mounting location

STEP 1 MOUNTING BRACKETS

Follow (Fig 1 – 13) to attach the Mounting Brackets to the Passenger Side. Remove factory studs from vehicle mounting points prior to installing Mount Brackets.

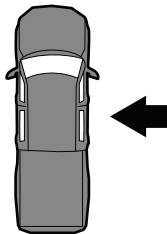


Passenger-side Front Mounting Area

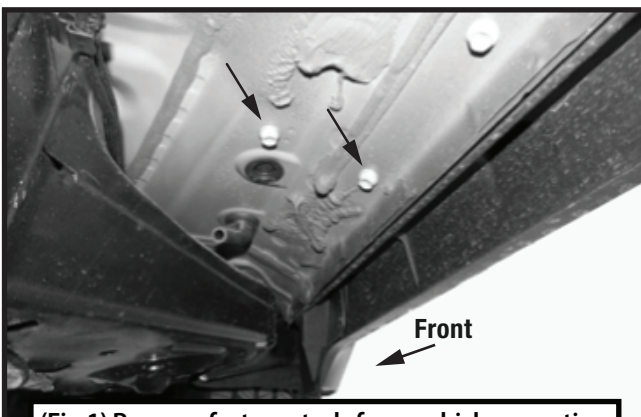


(Fig 1) Remove factory studs from vehicle mounting points prior to installing mount brackets

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washer
- (2) 8mmx 24mm x 3mm Flat Washers

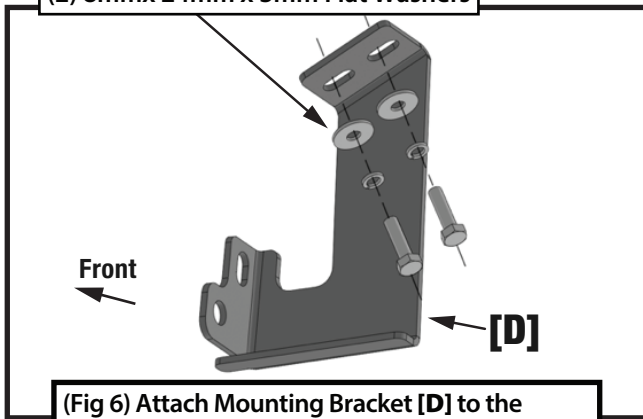


(Fig 6) Attach Mounting Bracket [D] to the Passenger/Right side second mounting location


- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washer
- (2) 8mmx 24mm x 3mm Flat Washers

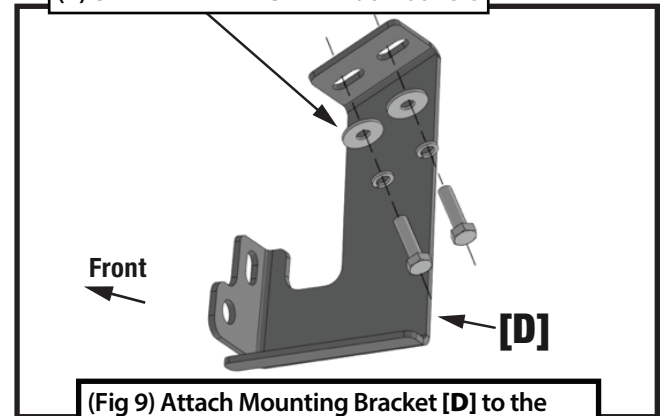

(Fig 9) Attach Mounting Bracket [D] to the Passenger/Right side third mounting location

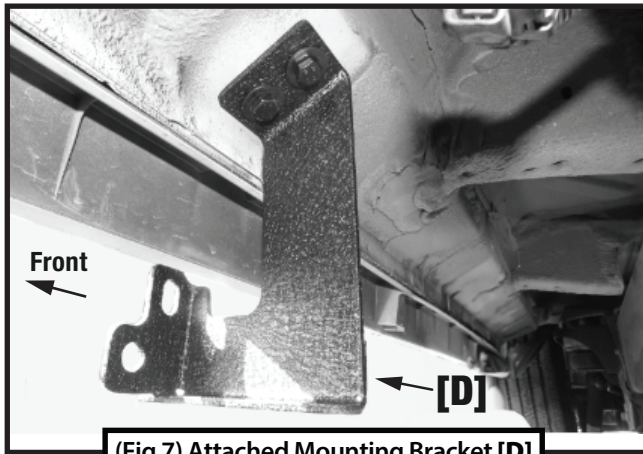


(Fig 7) Attached Mounting Bracket [D]

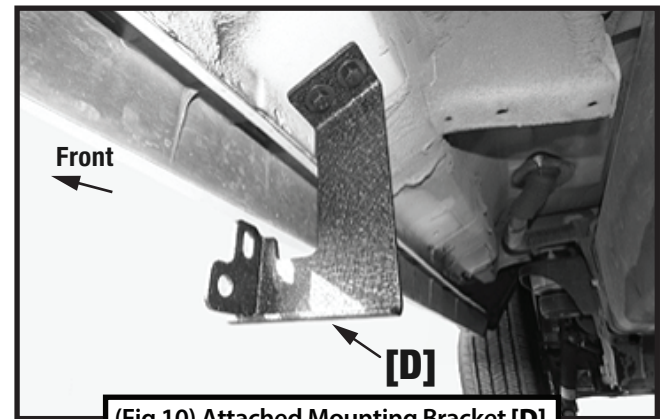

(Fig 10) Attached Mounting Bracket [D]




Passenger-side 3rd Mounting Area

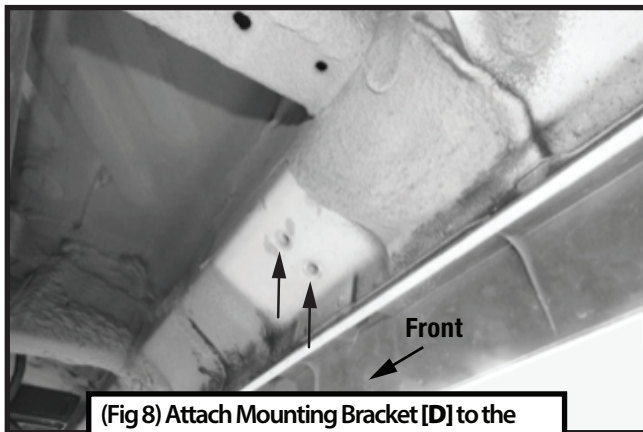

(Fig 8) Attach Mounting Bracket [D] to the Passenger/Right side third mounting location




Passenger-side Rear Mounting Area

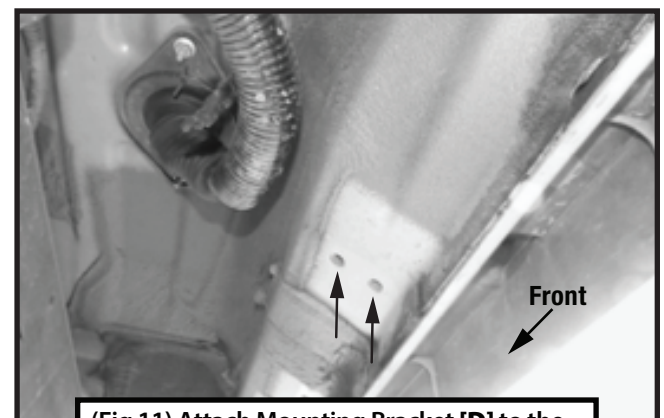


(Fig 11) Attach Mounting Bracket [D] to the Passenger/Right side rear mounting location

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washer
- (2) 8mmx 24mm x 3mm Flat Washers

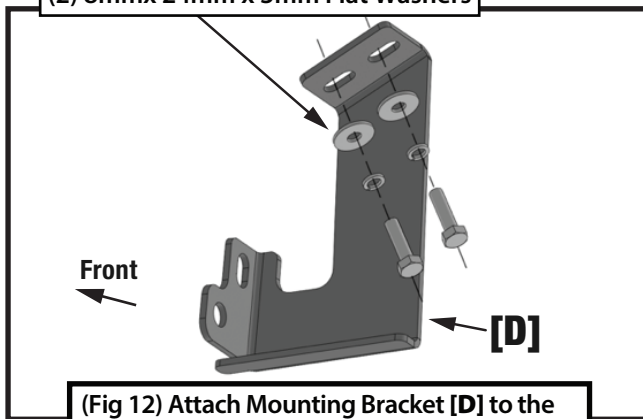


(Fig 12) Attach Mounting Bracket [D] to the Passenger/Right side rear mounting location

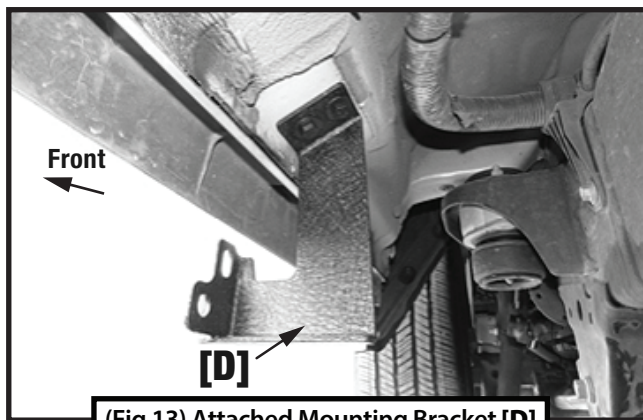

(Fig 13) Attached Mounting Bracket [D]

STEP 2 MOUNTING RUNNING BOARD


Follow (Fig 14) to install the running board. Level and adjust the running board and tighten all hardware.

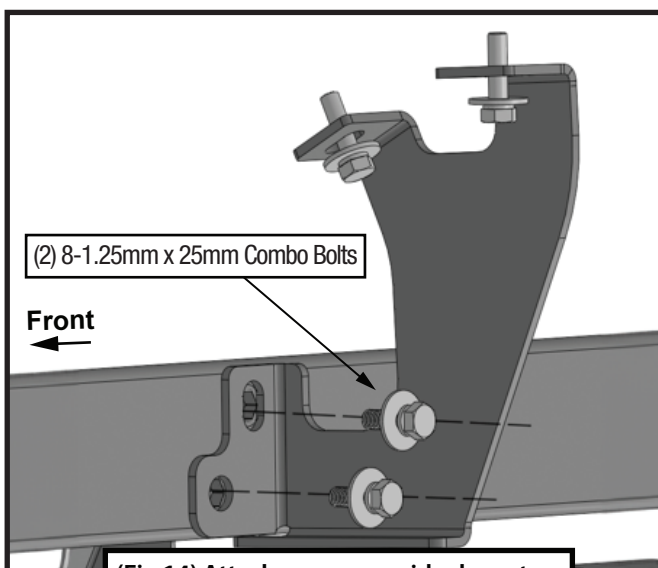

(Fig 14) Attach passenger side drop step to each mounted bracket

STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation.
Use Front Bracket [A] instead of [C];
Use Center and Rear Brackets [B] instead of [D].

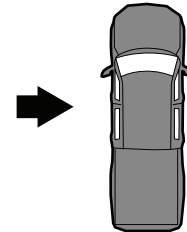

STEP 4

Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

