



# TYGER®

## RISER®

TG-RS6F60228

### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

### TORQUE VALUES



Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- |   |                                   |                                     |
|---|-----------------------------------|-------------------------------------|
| x1 Passenger/Right Tyger Riser <b>P</b>                                   | x12 8-1.25mm x 25mm Combo Bolts   | x10 8mm Clip Nuts                   |
| x1 Driver/Left Tyger Riser <b>D</b>                                       | x20 8mm Lock Washers              | x8 8mm Nylon Lock Nuts              |
| x2 Driver Side Front and Passenger Side Rear Mounting Brackets <b>[A]</b> | x20 8mm x 24mm x 2mm Flat Washers | x16 8mm x 16mm x 1.6mm Flat Washers |
| x1 Driver Side Center Mounting Bracket <b>[B]</b>                         | x10 8-1.25mm x 30mm Hex Bolts     |                                     |
| x1 Passenger Side Center Mounting Bracket <b>[D]</b>                      | x10 8mm Hex Nuts                  |                                     |
| x2 Passenger Side Front and Driver Side Rear Mounting Brackets <b>[C]</b> | x18 8-1.25mm x 25mm Hex Bolts     |                                     |
| x4 Support Brackets <b>[E]</b>  | x10 8mm x 28mm x 3mm Flat Washers |                                     |


Parts List

### Top View


**ATTENTION:** Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger Tyger Riser

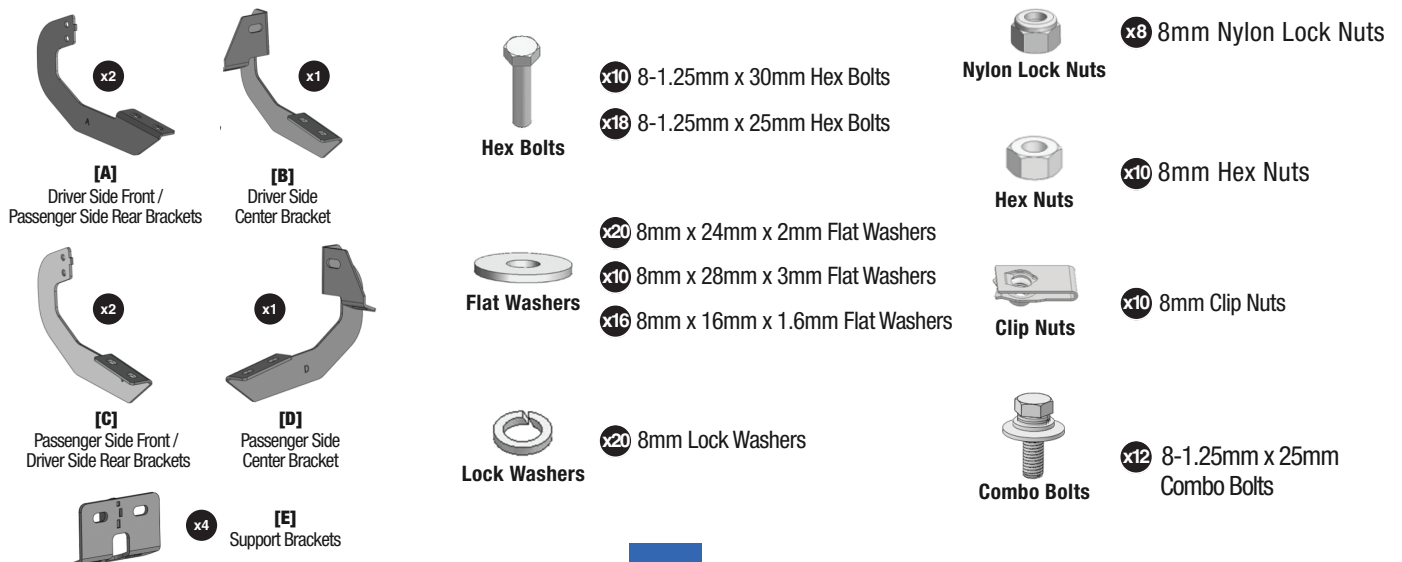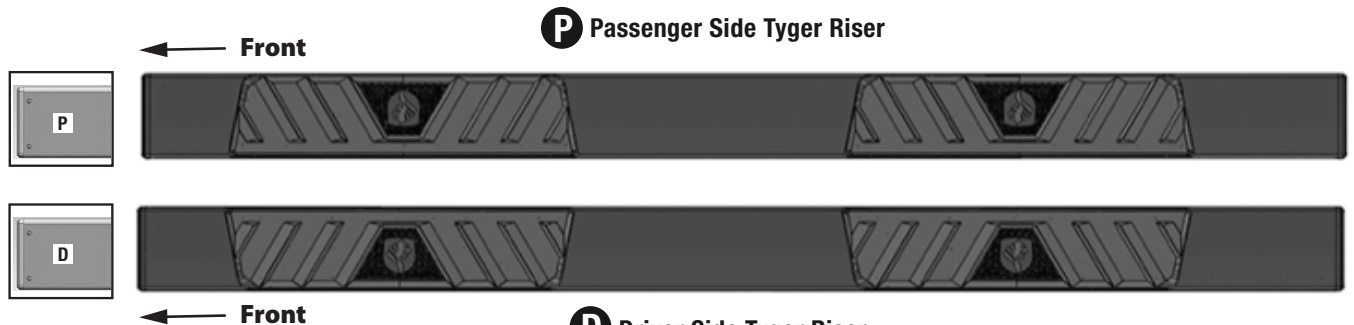

Reference the letters printed on the brackets to determine mounting locations

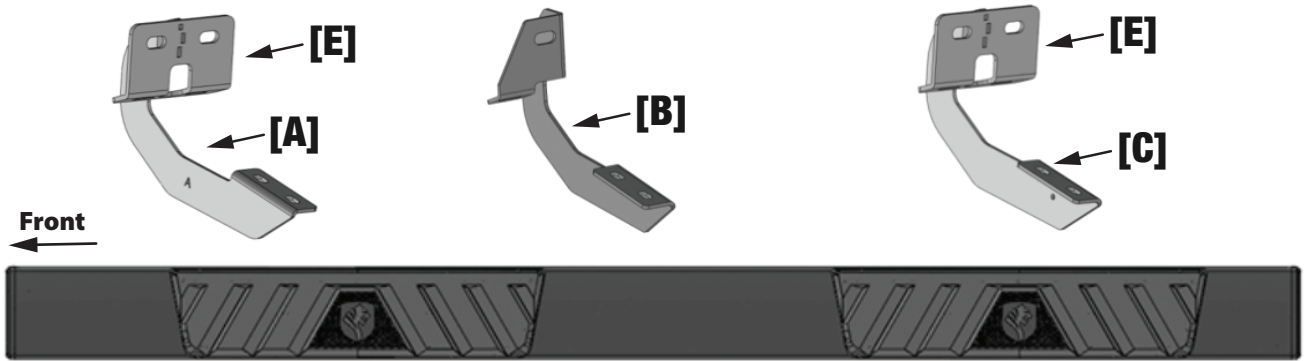


**D** Driver Side Riser

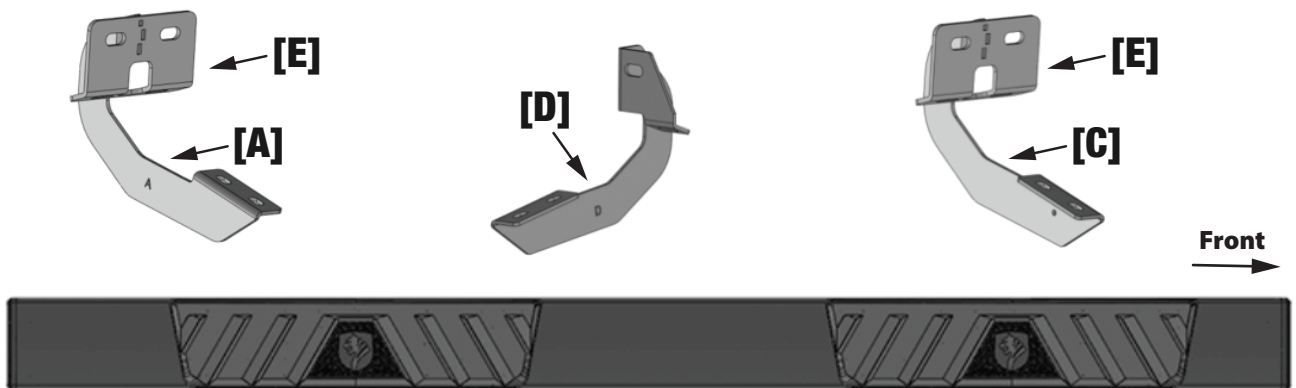


**P** Passenger Side Riser

## Bottom View

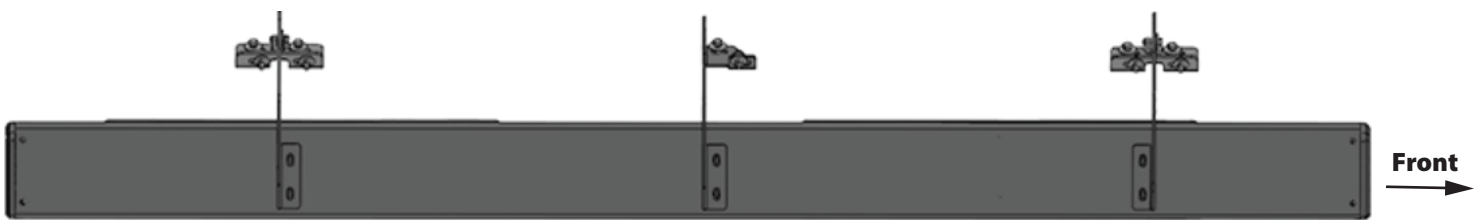


**D** Driver Side Riser

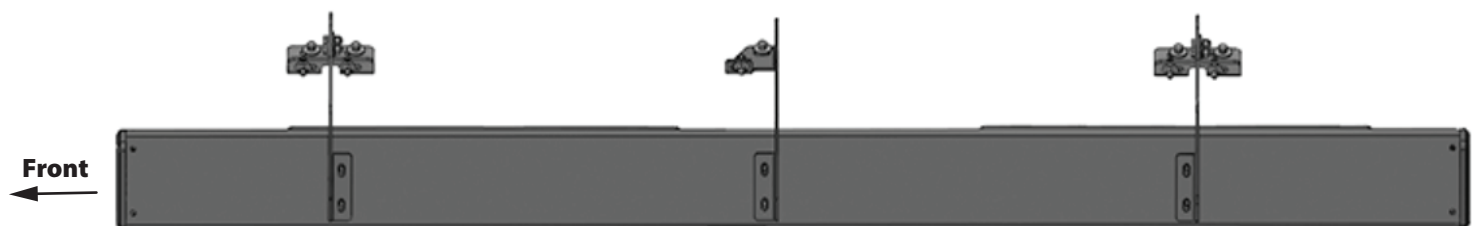


**P** Passenger Side Riser

## TOOLS REQUIRED

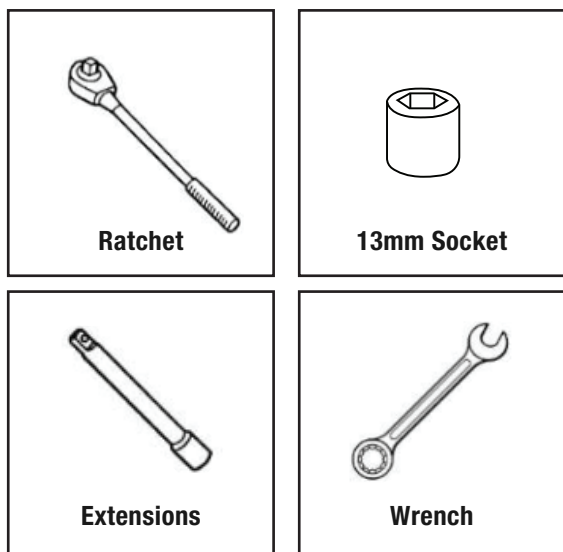


## STEP 1 MOUNTING BRACKETS




Follow (Fig 1 – 11) to attach the Mounting Brackets to the Passenger Side.

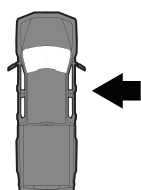

Passenger-side Front Mounting Area

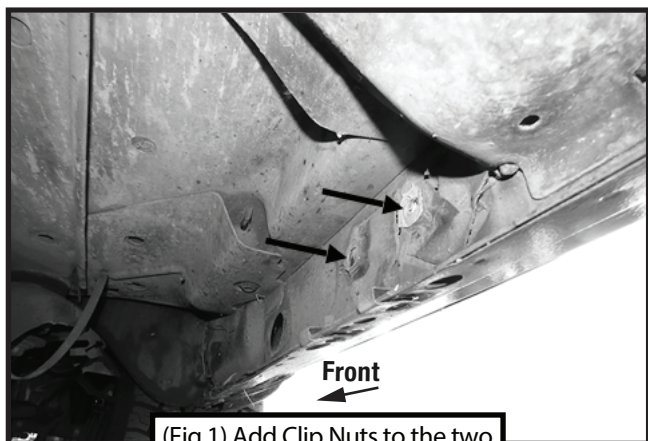


(Fig 1) Add Clip Nuts to the two shown front mounting location

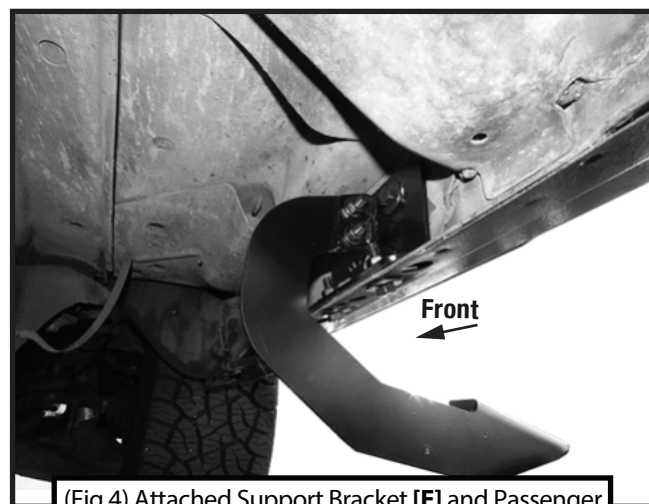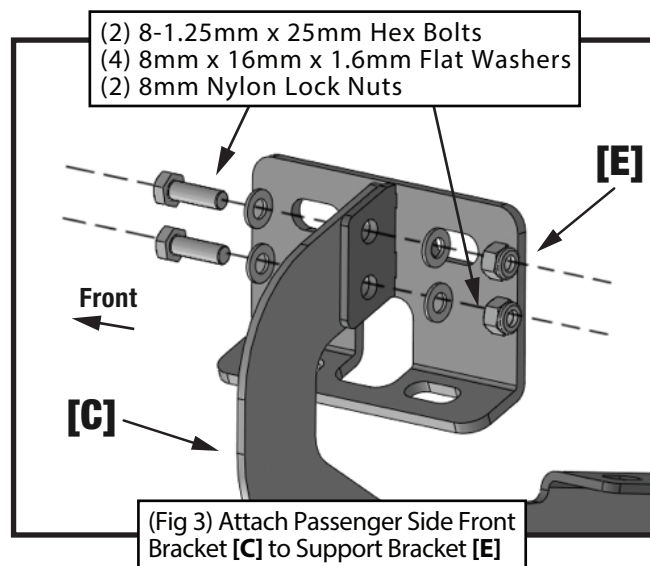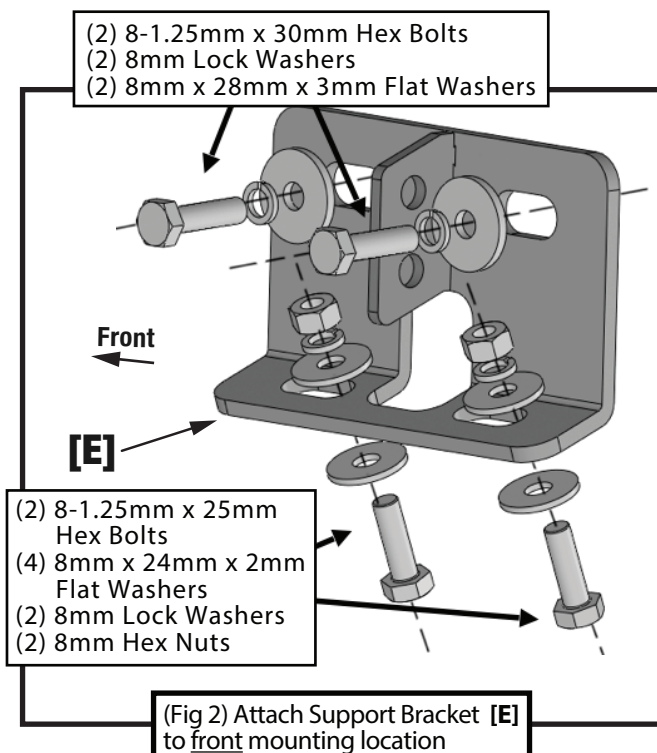


(Fig 4) Attached Support Bracket **[E]** and Passenger Side Front Bracket **[C]** to front mounting location

## Passenger-side Center Mounting Area

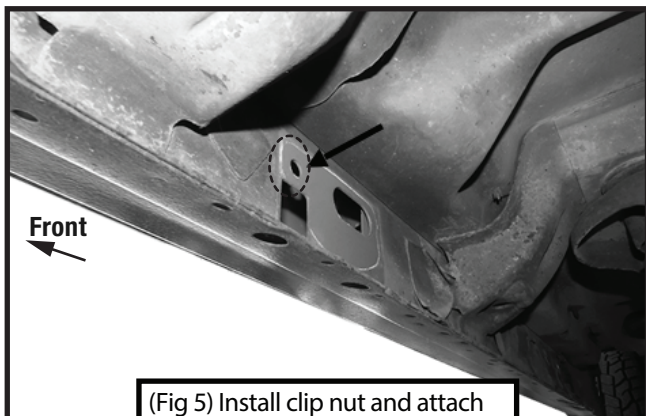


(Fig 5) Install clip nut and attach Passenger Side Center Bracket [D]

- (1) 8-1.25mm x 30mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm x 28mm x 3mm Flat Washer

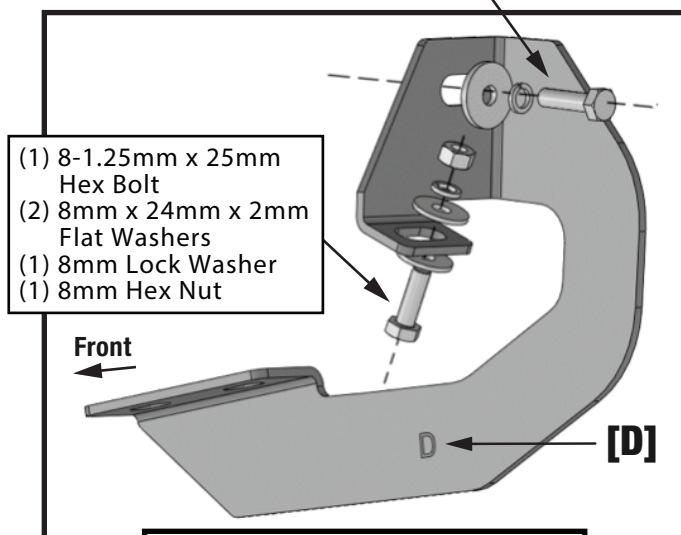

(Fig 6) Attach Passenger Side Center Bracket [D] to center mounting location

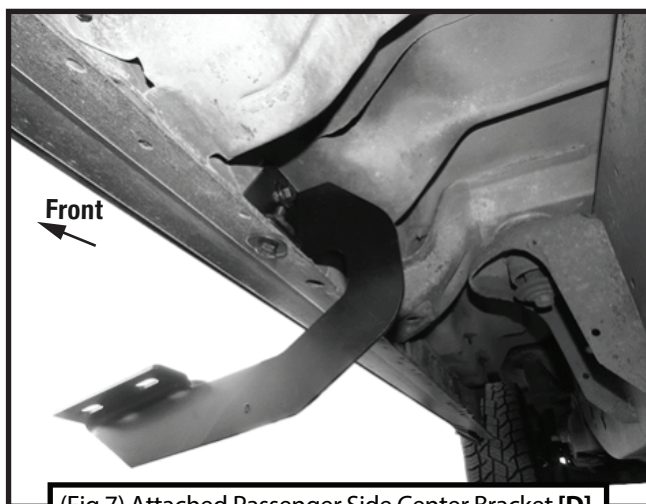


(Fig 7) Attached Passenger Side Center Bracket [D]

## Passenger-side Rear Mounting Area




(Fig 8) Add Clip Nuts to the two shown rear mounting locations

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 28mm x 3mm Flat Washers

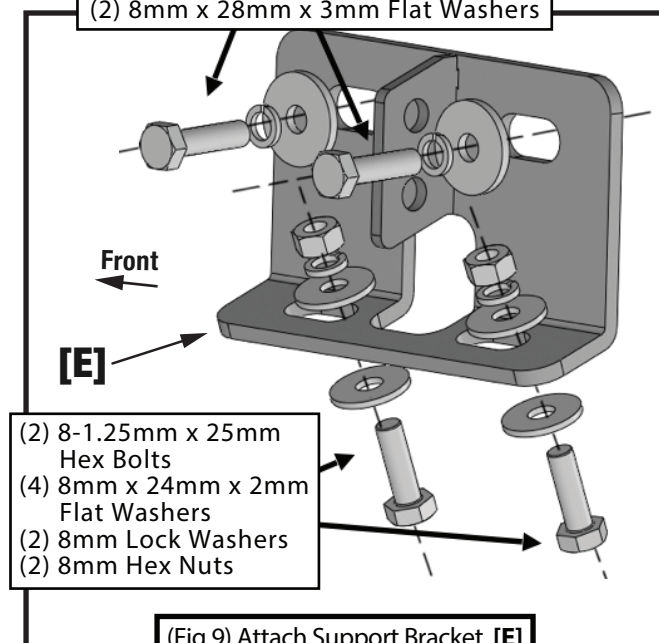


(Fig 9) Attach Support Bracket [E] to rear mounting location

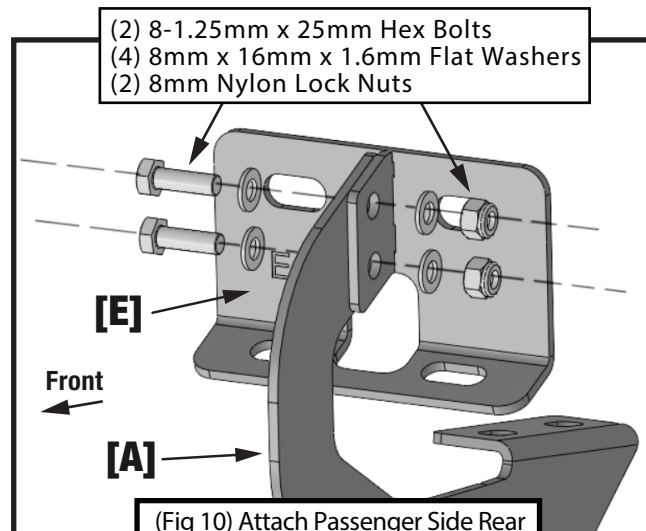

(Fig 10) Attach Passenger Side Rear Bracket [A] to Support Bracket [E]




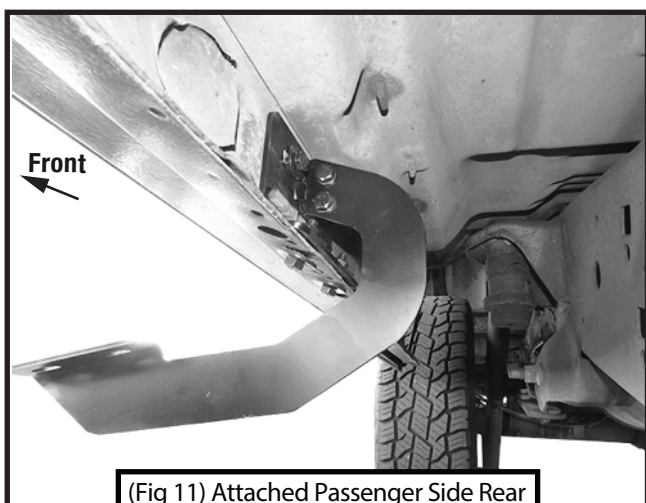

(Fig 11) Attached Passenger Side Rear Bracket [A] and Support Bracket [E]

## STEP 2


Follow (Fig 12) to install the running board.

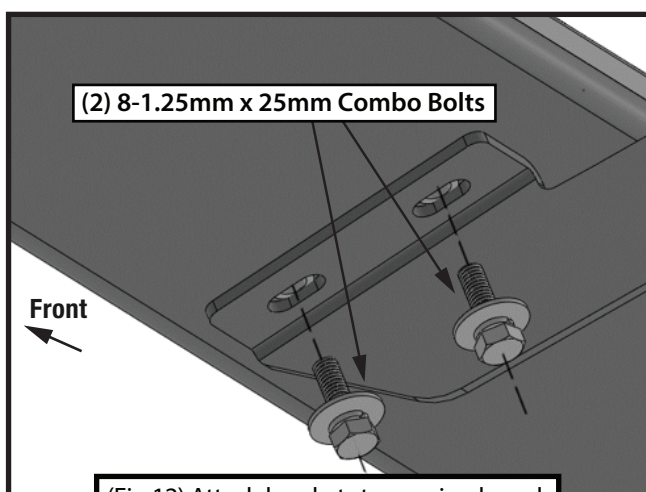

(Fig 12) Attach brackets to running board

## STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation.  
 Use Front Mounting Bracket [A] instead of [C];  
 Use Center Mounting Bracket [B] instead of [D];  
 Use Rear Mounting Bracket [C] instead of [A].

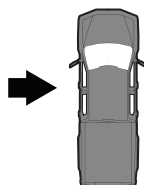

## STEP 4

Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation