


# STAR STRIDER®

TG-SR2T74938

<b>BEFORE INSTALI</b>	LATION		TORQUE VALU	ES	
READ INSTRUCTIONS CAREFULLY BEFORE STARTING		Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs	
INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY			6mm	6-7	6-7
DAMAGE BEFORE INSTALLATION COULD LEAD TO A			8mm	15-16	22-23
REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY			10mm	31-32	44-45
DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT		12mm	54-55	78-79	
		14mm	87-88	125-126	
WWW.ITGENAOTO.			1411111	07-00	123-120
Driver Side Stor	Stridor <b>O</b>	Driver Side Beer I	Prookot [C]	9mm Nylon Look Ny	ito
<ul> <li>x1 Driver Side Star Strider D</li> <li>x1 Driver Side Rear E</li> <li>x1 Passenger Side Star Strider P</li> <li>x1 Passenger Side Rear E</li> </ul>				x16 8mm Nylon Lock Nu x32 8mm x 24mm x 2m	
x1 Driver Side Fron	-	x1 Driver Side Suppo		x12 8mm Lock Washers	
	Front Bracket [D]	x1 Passenger Side S			
x1 Driver Side Cent	ter Bracket <b>[B]</b>	x6 8-1.25mm x 35m			
x1 Passenger Side	Center Bracket [E	] 💶 8-1.25mm x 30m	m Hex Bolts		Parts List
		T	on Viow		
	-		op View		
ATTENTION	: Refer to 🕕 an	d <b>P</b> labelling on the	side of the tubes to	determine Driver and Passe	nger Star Striders
P	Front	\* * * * /	Passenger Sic	le Star Strider	×
	Front Front	$\left[ \begin{array}{c} \star \\ \star $	USERALA ED TURIOR	* * *	*
	Front	The second secon	USERALA ED TURIOR	Star Strider	X1 DD Passenger Side


# TYGER<sup>®</sup>


#### Reference the letters printed on the brackets to determine mounting locations

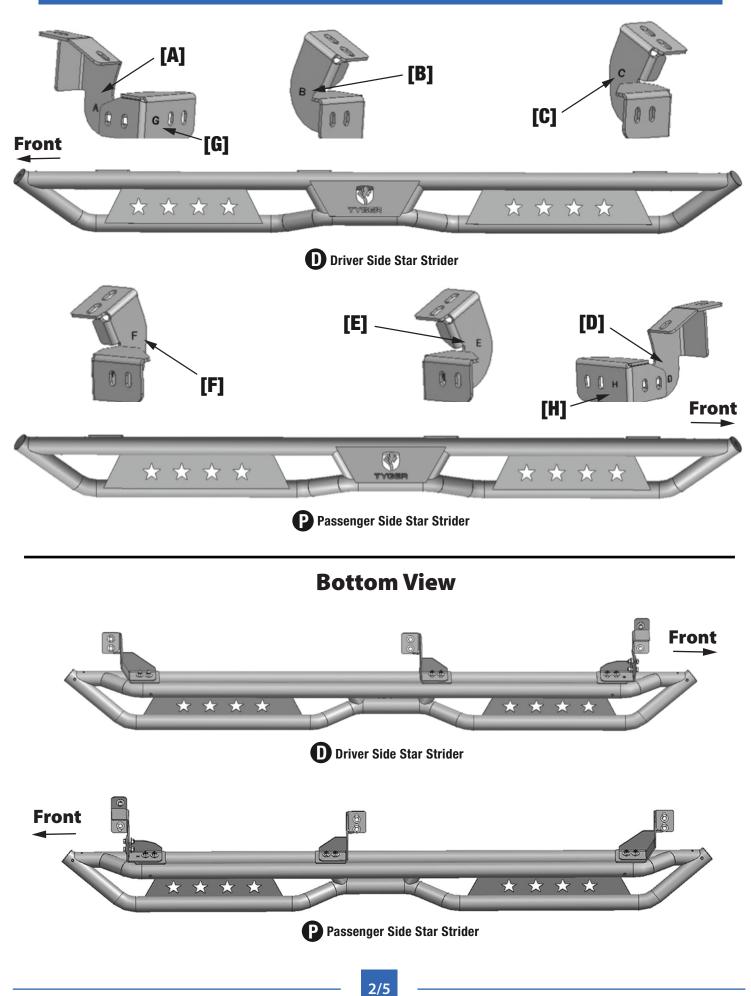

## **TYGER**®

## **TOOLS REQUIRED**

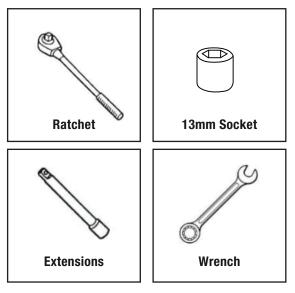


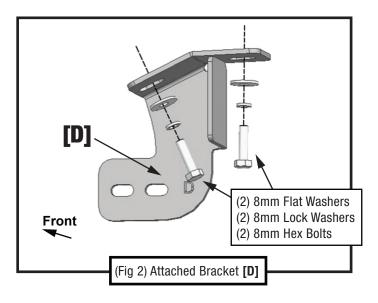






## **MOUNTING BRACKETS**

Follow (Fig 1-11) to attach the brackets to the Passenger Side.




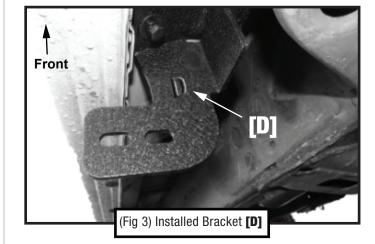

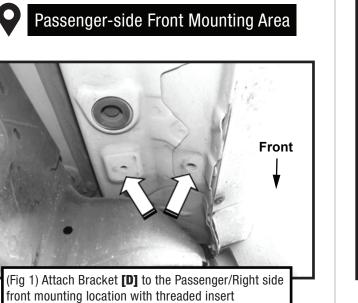


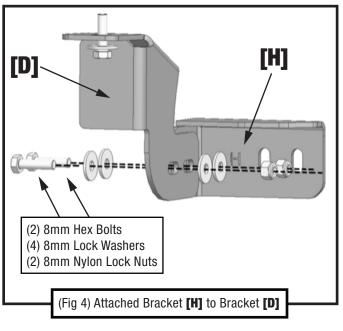

## 😵 TYGER<sup>®</sup>

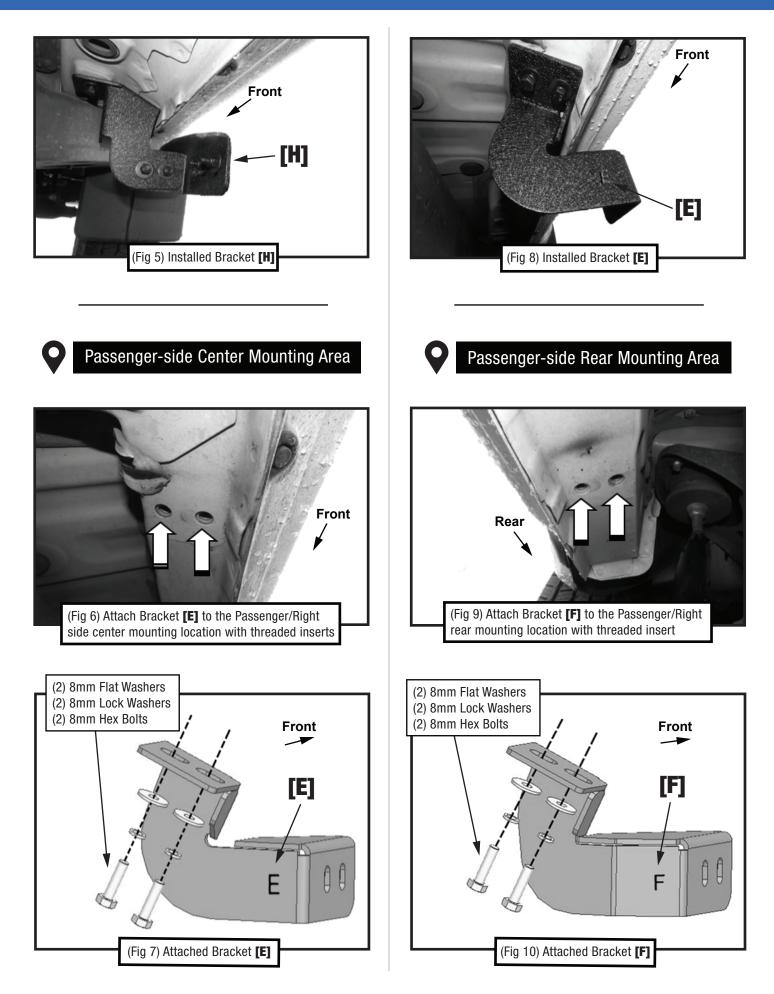




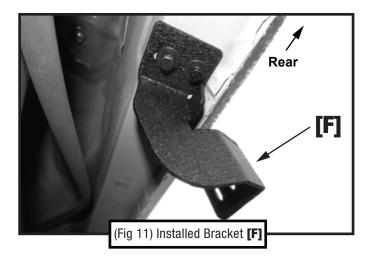





Repeat **STEPS 1-2** for driver side installation. Use Bracket **[A]** instead of **[D]**; Use Bracket **[B]** instead of **[E]**; Use Bracket **[C]** instead of **[F]**; Use Support Bracket **[G]** instead of **[H]**.



#### STEP 2 MOUNTING RUNNING BOARDS

Follow (Figs 12-13) to install the passenger-side running board.

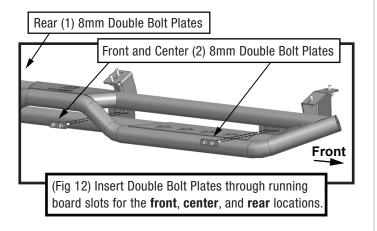

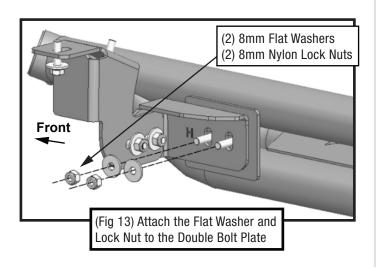



Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

