



TYGER®

TYGER RIDER

TG-SS2T36008

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT:

WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- x1 Driver Side Sidebar **D**
- x1 Passenger Side Sidebar **P**
- x1 Mounting Bracket **[A]**
- x1 Mounting Bracket **[C]**

- x2 Mounting Brackets **[B]**
- x2 Mounting Brackets **[D]**
- x12 8mm Lock Washers
- x12 8mm x 24mm x 2mm Flat Washers

- x12 8-1.25mm x 30mm Hex Bolts
- x12 8mm Combo Bolts

Parts List

Top View

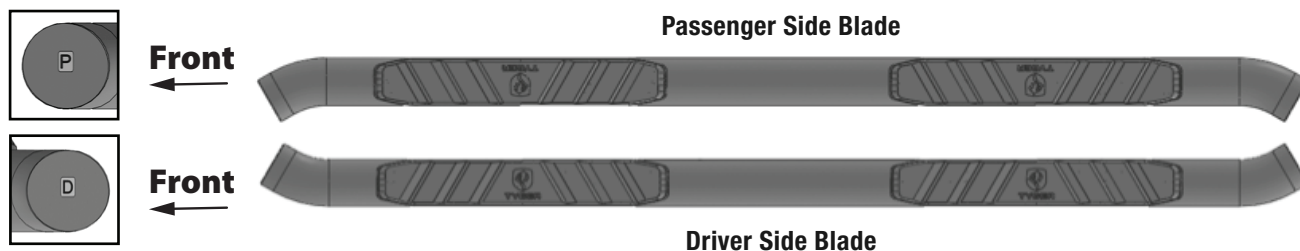

[A]
Mounting Bracket



[B]
Mounting Brackets



[C]
Mounting Bracket



[D]
Mounting Brackets



x12
8-1.25mm x 30mm
Hex Bolts



x12
8mm Lock Washers





x12
8mm x 24mm x 2mm
Flat Washers





x12
8mm Combo Bolts


Reference the letters printed on the brackets to determine mounting locations

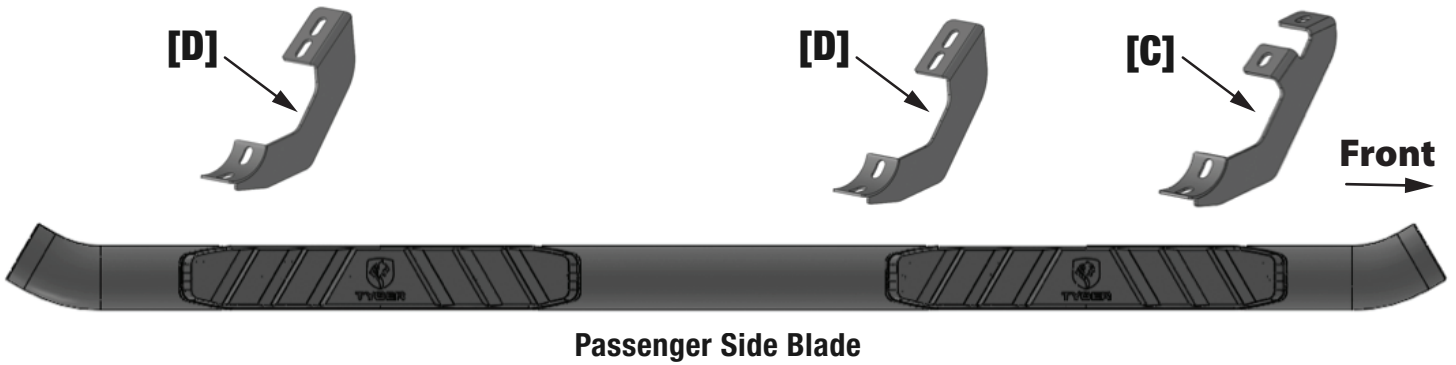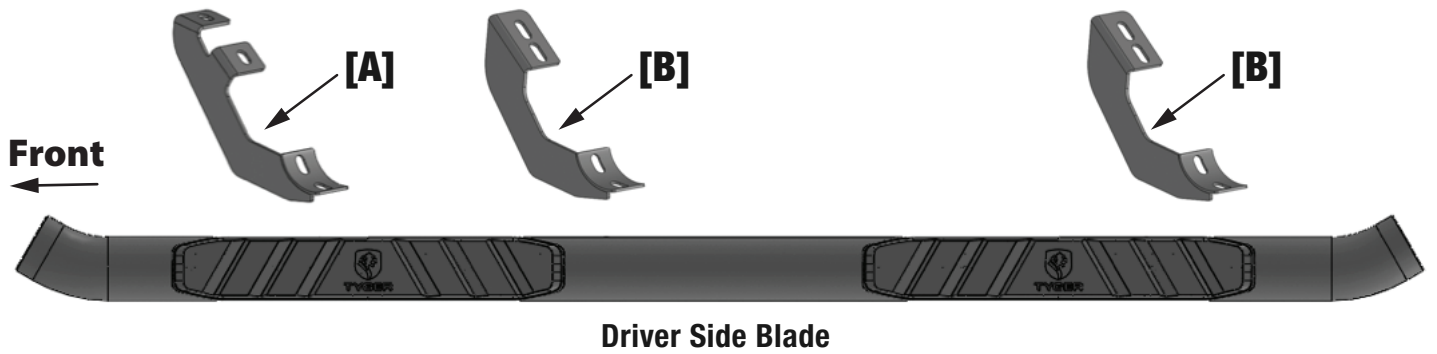


Bottom View

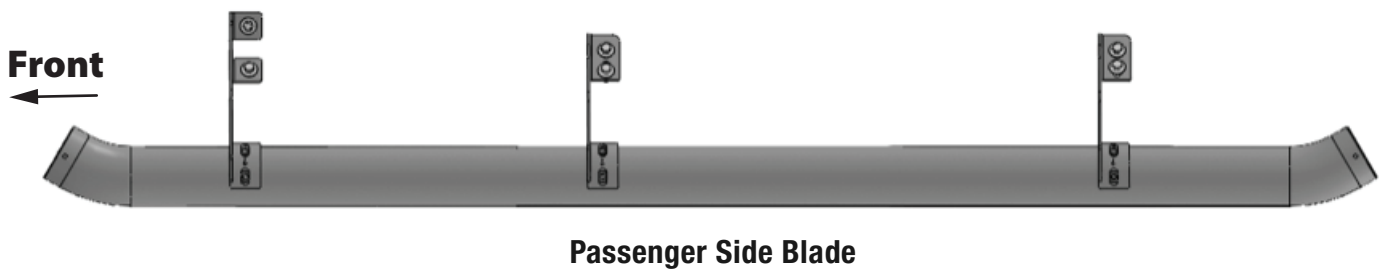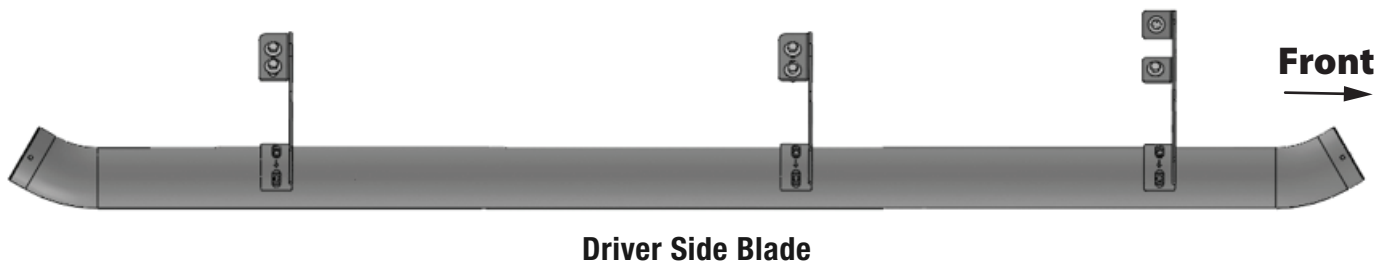


TOOLS REQUIRED

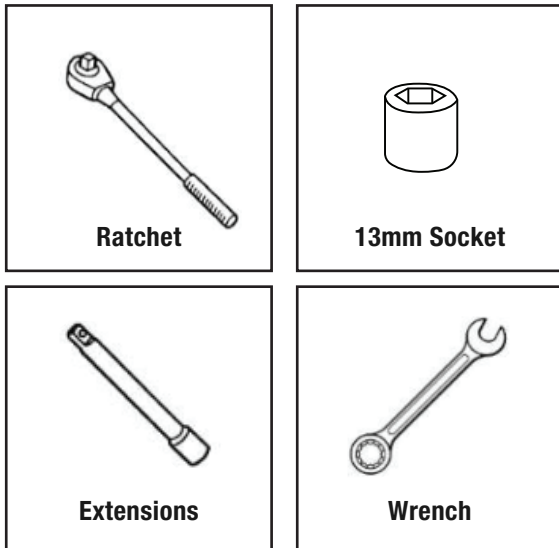

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm x 2mm Flat Washers

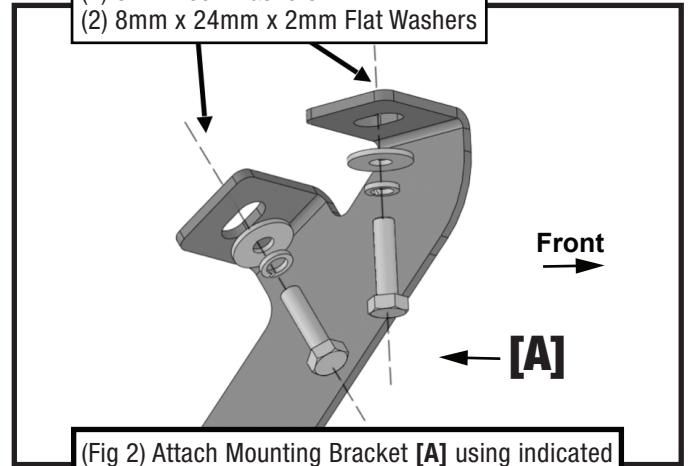


(Fig 2) Attach Mounting Bracket **[A]** using indicated hardware to the front mounting location. **DO NOT** fully tighten hardware at this time.

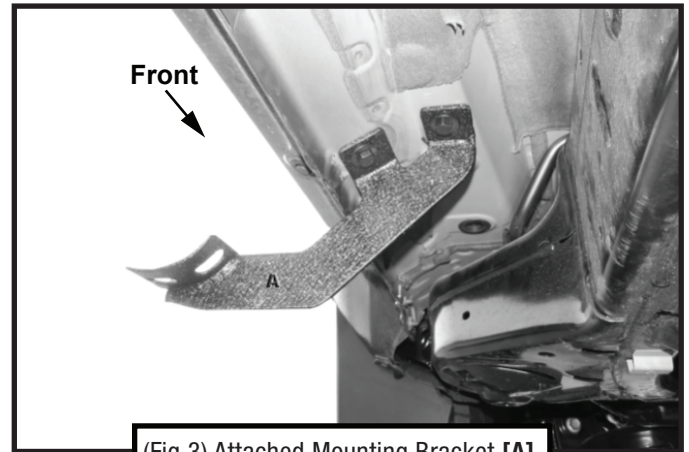


(Fig 3) Attached Mounting Bracket **[A]**

STEP 1 MOUNTING BRACKETS

Follow (Fig 1 – 9) to attach the brackets to the Driver Side. **DO NOT** fully tighten hardware at this time.

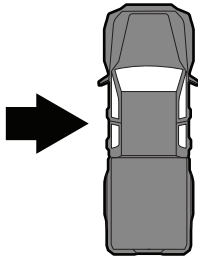


Driver-side Front Mounting Area

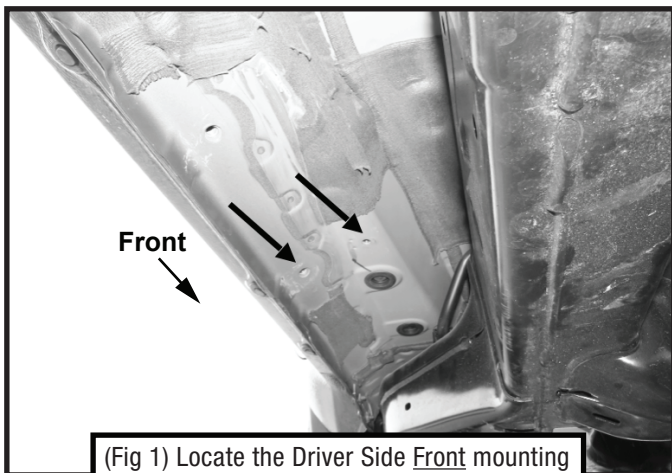


(Fig 1) Locate the Driver Side Front mounting location and attach Bracket **[A]**

Driver-side Center Mounting Area

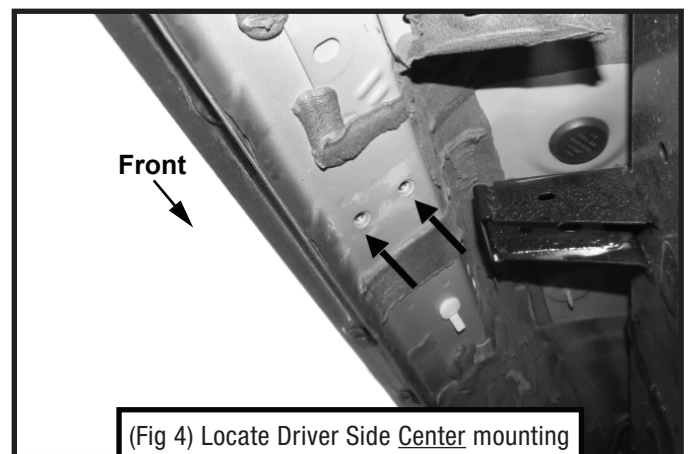


(Fig 4) Locate Driver Side Center mounting location and attach Mounting Bracket **[B]**

- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm x 2mm Flat Washers

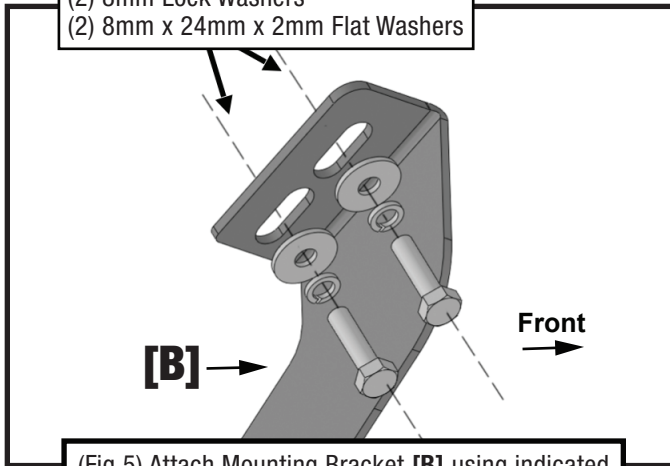


(Fig 5) Attach Mounting Bracket **[B]** using indicated hardware to the center mounting location. DO NOT fully tighten hardware at this time


- (2) 8-1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm x 2mm Flat Washers

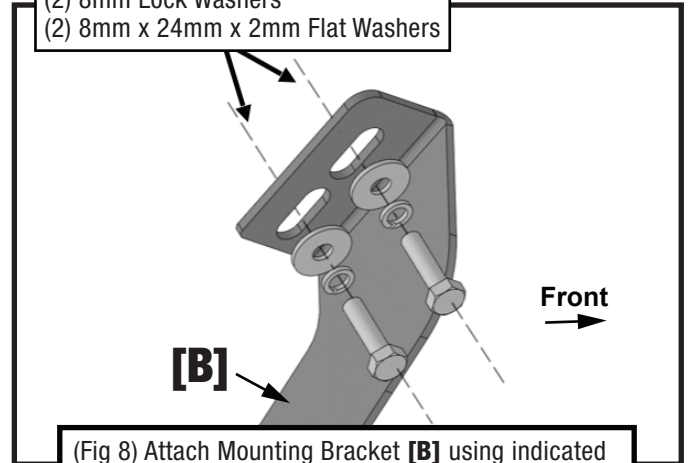

(Fig 8) Attach Mounting Bracket **[B]** using indicated hardware to the rear mounting location. DO NOT fully tighten hardware at this time

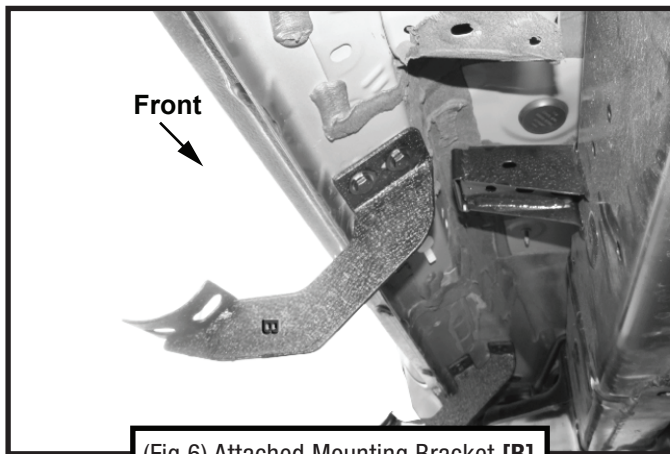


(Fig 6) Attached Mounting Bracket **[B]**

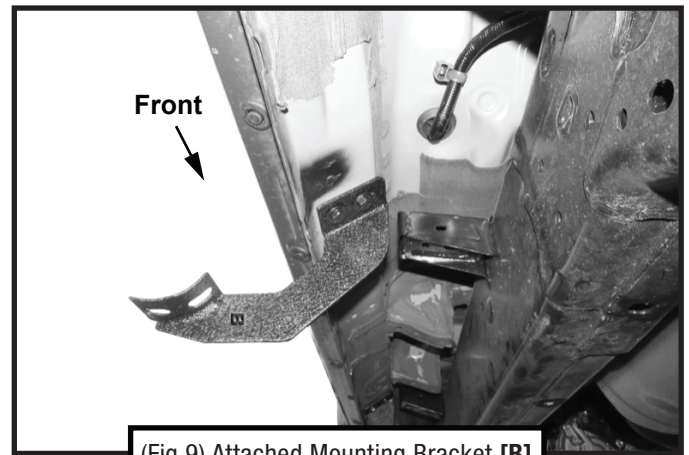

(Fig 9) Attached Mounting Bracket **[B]**




Driver-side Rear Mounting Area

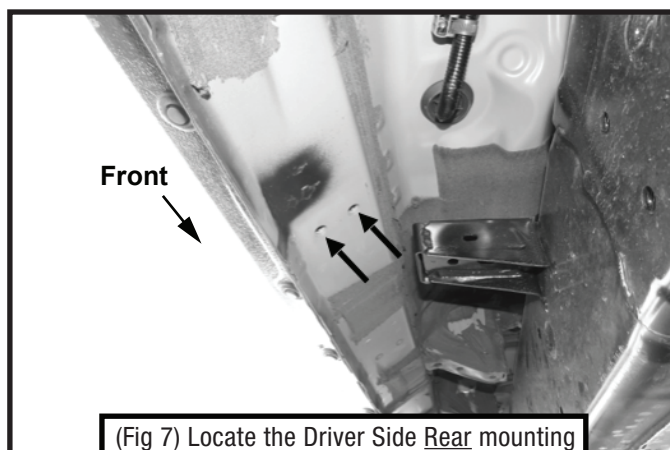

(Fig 7) Locate the Driver Side Rear mounting location and attach Mounting Bracket **[B]**

STEP 2 MOUNTING RUNNING BOARDS


Follow (Fig 10) to install the running board.

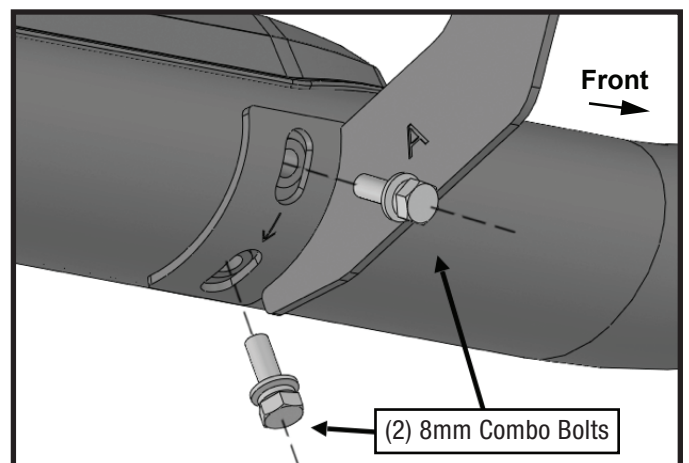

(Fig 10) Attach brackets to Sidebar using indicated hardware

STEP 3 PASSENGER SIDE

Repeat **STEPS 1-2** for passenger side installation.
 Use Front Mounting Bracket **[C]** instead of **[A]**;
 Use Center Mounting Bracket **[D]** instead of **[B]**;
 Use Rear Mounting Bracket **[D]** instead of **[B]**.

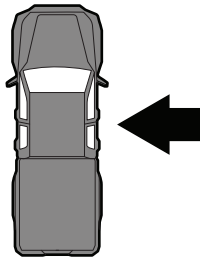

STEP 4

Installation is complete. **Tighten all hardware at this time to preferred position.**