

TYGER TRAX

TG-TX7C29828

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES


Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- Driver/Left TYGER TRAX
- Passenger/Right TYGER TRAX
- x3 Driver/Left Mounting Brackets (A)
- x3 Passenger/Right Mounting Brackets (B)
- x12 8-1.25mm x 30mm Hex Bolts
- x12 8-1.25mm x 25mm Combo Bolts
- x12 8mm Lock Washers
- 8mm x 24mm 0D x 2mm Flat Washers

8mm Clip Nuts

Parts List


Reference the letters printed on the brackets to determine mounting locations

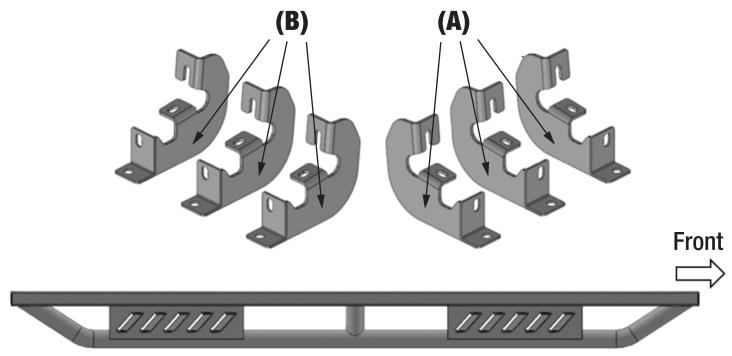

Passenger/Right TYGER TRAX



Bottom View

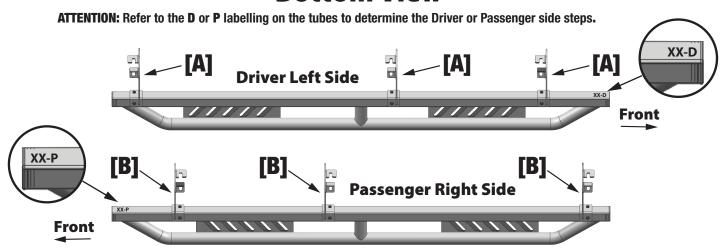


PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

STEP1

Start the installation under the Passenger/Right side of the vehicle. Locate the front mounting location along the bottom and inner side of the body panel (Fig 1). Installation will use the 1st, 2nd and 4th mounting locations. NOTE: It may help to hold a Bracket up in place to help determine the mounting holes to use along the bottom and inner side of the body.


Passenger/Right side Installation Pictured

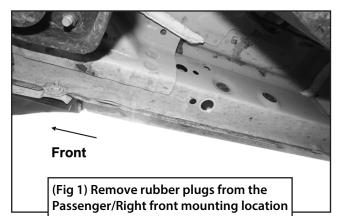

STEP 2

Remove rubber plugs from the front location. Select (2) 8mm Clip Nuts. Slide each Clip Nut into the large hole and over the smaller hole next to it. Line up threaded nut on the Clip Nut with smaller hole in body panel (Fig 2).

Passenger/Right side Installation Pictured

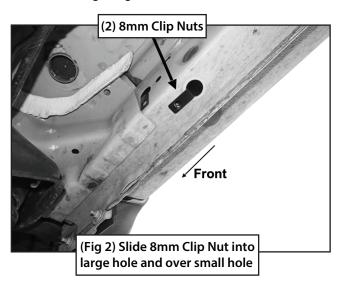


STEP 3

Select (1) Passenger/Right Mounting Bracket (B). Attach the Mounting Bracket (B) to the (2) Clip Nuts in the vehicle with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Fig 3). DO NOT tighten hardware.



Passenger/Right side Installation Pictured

- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers
- (2) 8mm Clip Nuts

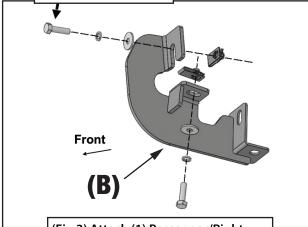


(Fig 3) Attach (1) Passenger/Right Mounting Bracket (B) to the Clip Nuts

STEP 4

Repeat **STEPS 1-3** to attach the remaining (2) Passenger/Right Mounting Bracket (B) to the **2nd** and **rear** locations (Figs 3-5). DO NOT tighten hardware.

Passenger/Right side Installation Pictured

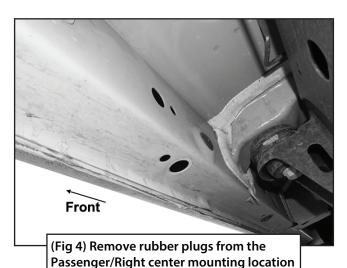


Front

(Fig 5) Remove rubber plugs from the Passenger/Right rear mounting location

STEP 5

Select the Passenger/Right TYGER TRAX. Attach the TYGER TRAX to the Mounting Brackets with (6) 8mm Combo Bolts (Fig 6). DO NOT tighten hardware.

Passenger/Right side Installation Pictured

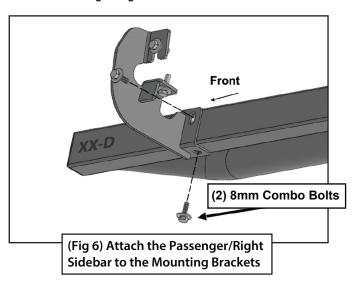

STEP 6

Repeat STEPS 1-5 to attach the Driver/Left TYGER TRAX.



Do periodic inspections to the installation to make sure that all hardware is secure and tight.