



TYGER TRAX

TG-TX7T29798

Scan to Download the
Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT


TORQUE VALUES

| Fastener Size | Class 8.8 Torque (ft-lbs) | Class 10.9 Torque (ft-lbs) |
|---------------|---------------------------|----------------------------|
| 6mm | 6-7 | 6-7 |
| 8mm | 15-16 | 22-23 |
| 10mm | 31-32 | 44-45 |
| 12mm | 54-55 | 78-79 |
| 14mm | 87-88 | 125-126 |

- x1** Driver/Left Tyger Trax
- x1** Passenger/Right Tyger Trax
- x1** Driver/Left Front Mounting Bracket (A)
- x1** Passenger/Right Front Mounting Bracket (D)
- x1** Driver/Left Second Mounting Bracket (B)
- x1** Passenger/Right Second Mounting Bracket (E)
- x2** Driver/Left Rear Mounting Brackets (C)
- x2** Passenger/Right Rear Mounting Brackets (F)
- x16** 8mm x 30mm Hex Bolts
- x16** 8mm x 25mm Combo Bolts
- x16** 8mm Lock Washers
- x16** 8mm x 24mm OD x 2mm Flat Washers


Parts List

Reference the letters printed on the brackets to determine mounting locations

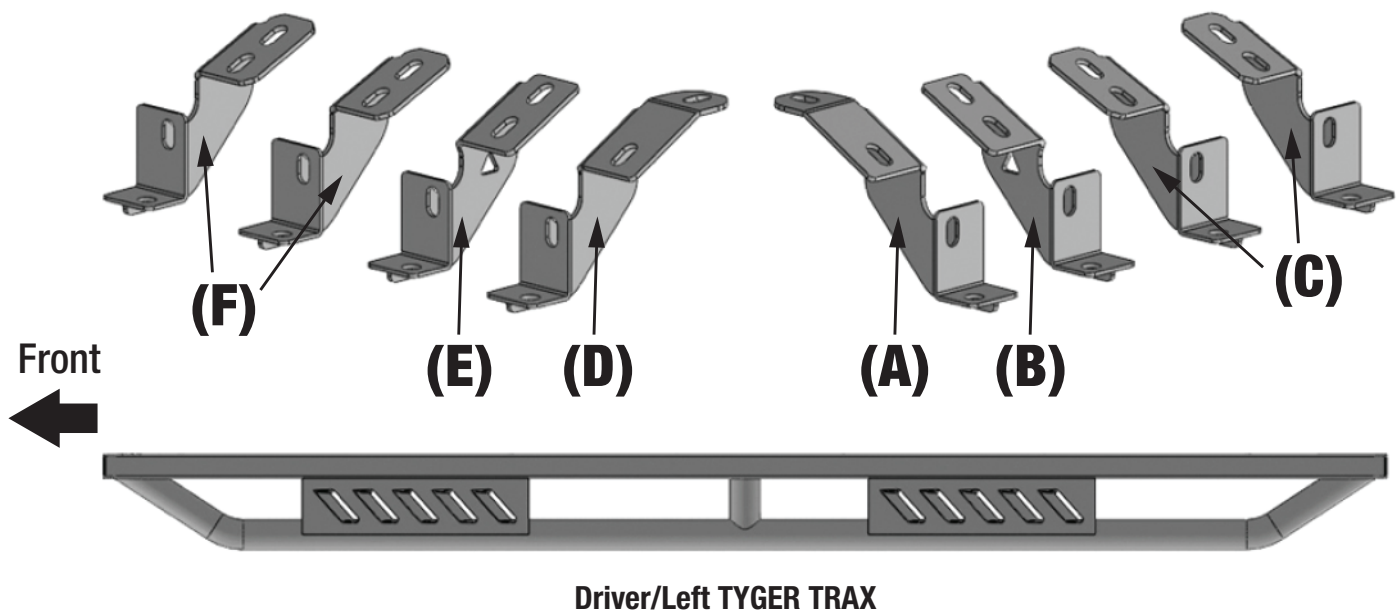

Bottom View

ATTENTION: Refer to the **D** or **P** labelling on the tubes to determine the Driver or Passenger side steps.

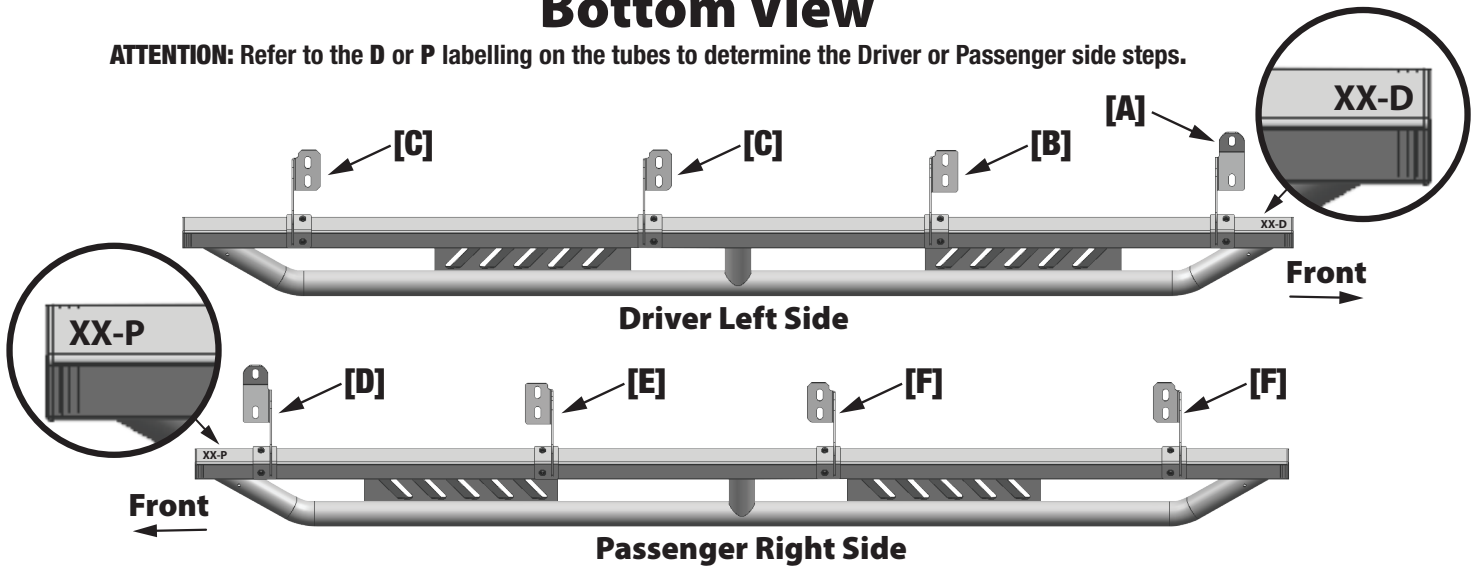



PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.
READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

STEP 1

Starting on the driver/left side of the vehicle and remove the plastic plugs or hex bolts from the factory mounting location along the bottom of the body (Figs 1 & 2).


Driver/Left Side Installation Pictured

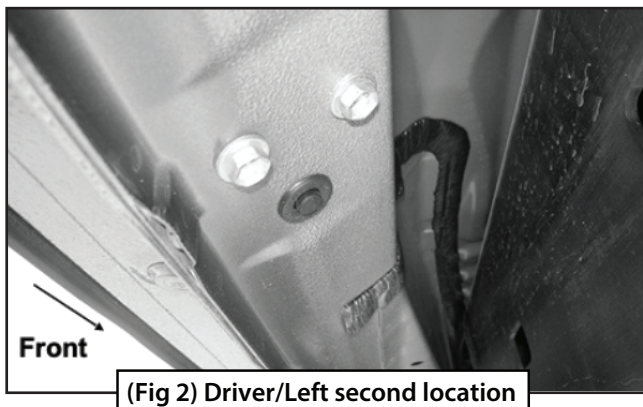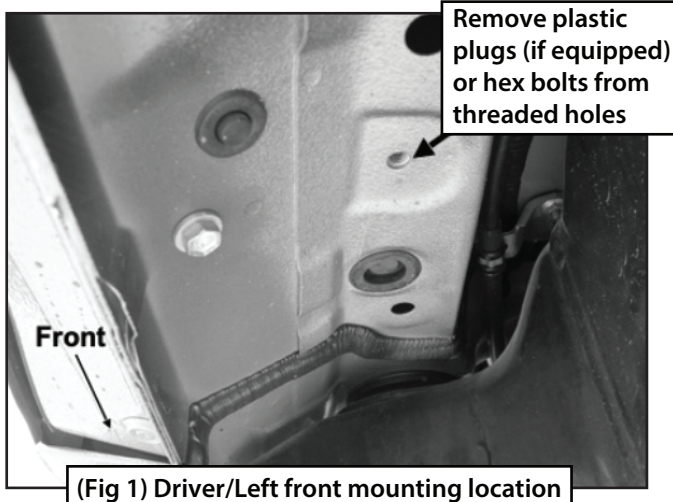

STEP 2


Select the Driver/Left Front Mounting Bracket (A). Attach the Bracket to the front location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Fig 3). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

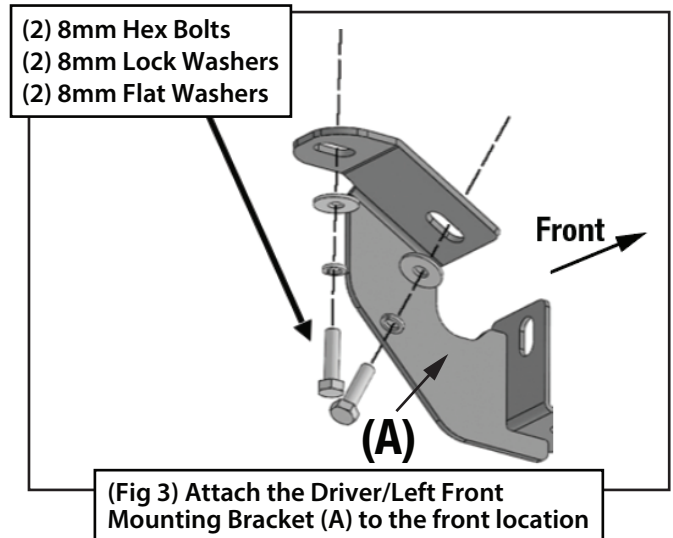

STEP 3


For the Second (B) and Rear Mounting Brackets (C) refer to (Fig 4) to determine the correct Mounting Bracket.

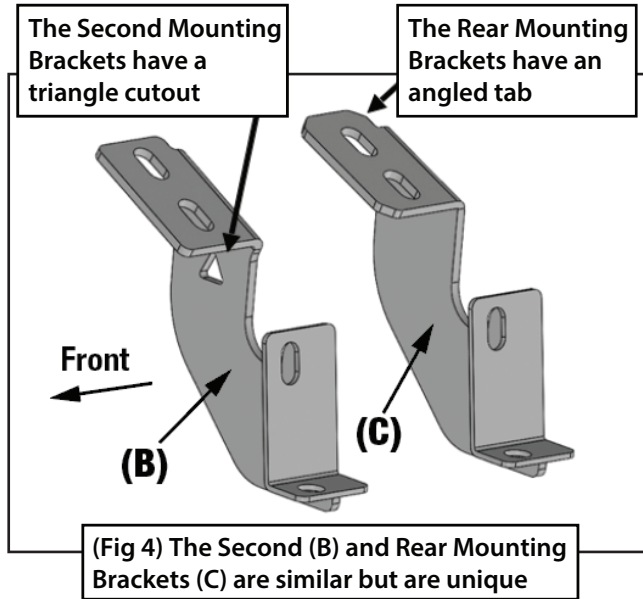

STEP 4

Repeat **STEPS 1 & 2** to attach (1) Driver/Left Second Mounting Bracket (B) to the second location (Fig 5).


Driver/Left Side Installation Pictured

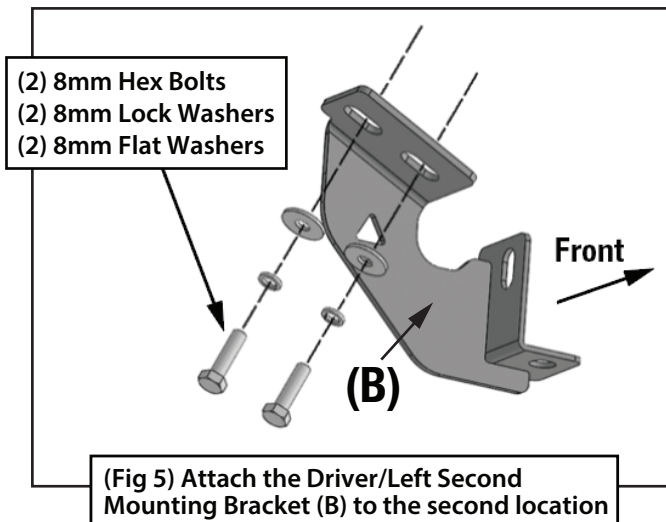

STEP 5

Repeat **STEPS 1 & 2** to attach (2) Rear Mounting Brackets (C) to the rear locations (Fig 6).


Driver/Left Side Installation Pictured

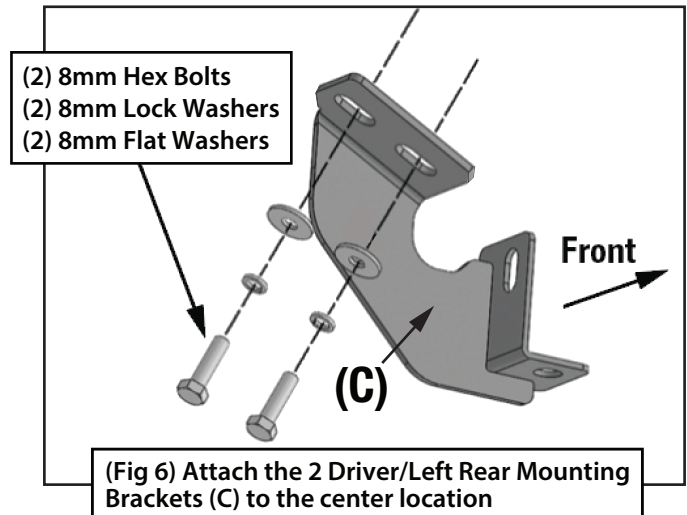

STEP 6

Select the Driver/Left TYGER TRAX. Attach the TYGER TRAX to the Mounting Brackets with (6) 8mm Combo Bolts (Fig 7). **DO NOT** tighten hardware.

Driver/Left Side Installation Pictured

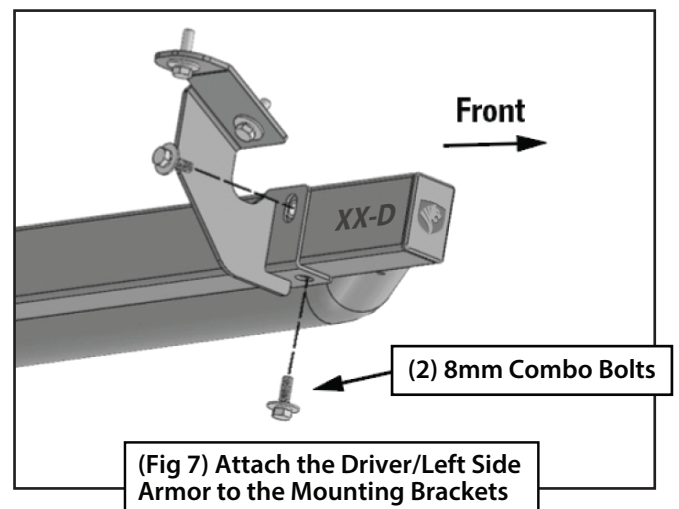

STEP 7

Level and adjust the TYGER TRAX and tighten all hardware.

STEP 8

Repeat **STEPS 1-7** to attach the Passenger/Right TYGER TRAX.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight.